



1836B

EN INSTRUCTIONS FOR USE

80/160 LUMEN
3,7V/1600mAh LI-POLYMER



Battery Tips

- Fully charge the lamp until the charge indicator turns green before first use.
- The charge indicator will turn on when the battery is flat. Charge the battery early.
- When the charge indicator is red: the battery is charging.
- When the charge indicator is green: charging has been completed.
- If the charge indicator does not show a steady light during battery charging, disconnect the lamp from the supply mains, and start charging the battery again.



WARNING: Do not look directly into the beam, as it will dazzle. Charge the battery for at least 10 hours before first use. Do not leave the battery flat for prolonged periods. Otherwise, it may get damaged. When the lamp is not used for prolonged periods, it should be charged once a month.



User Information

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

- The battery cannot be replaced
- The battery must be removed from the appliance before it is scrapped
- The appliance must be disconnected from the supply mains when removing the battery
- The battery is to be disposed safely