



Frequently Asked Questions

What size threads are your stabilizers and quick disconnects?

All Bowfinger stabilizers and quick disconnects are 5/16-24 threads.

What is the length of the Bowfinger quick disconnects?

All Bowfinger Archery quick disconnects are 1.1" long.

What is the difference between the Bark Buster Mounts and Ultimate Mounts?

The Ultimate mounts offer full adjustability with vertical and horizontal adjustments to any angle. The Ultimate Mounts also offer engraved marking lines and built in quick disconnects.

Which side bar mounts fits my bow?

Ultimate Front Side Bar Mount (Part#4261):

Compatible with all bows. Bolts to front of bow where stabilizer mounts.

Ultimate Rear Riser Mount: (Part#4262):

Compatible with all bows that have a threaded hole in rear of riser. (5/16-24 thread) The rear bow riser must be flat where the mount attaches to bow.

Ultimate Side Riser Mount: (Part#4263):

Mounts on either side or riser. Bow must have flat area on riser the size of a nickel and the hole in riser must allow clearance for ¼" screw.

Bark Buster Front/Rear Mount: (#4250/#4251)

Mounts to front or rear of bow using a 5/16-24 screw (If mounted to rear, riser must be flat)

Bark Side Riser Mount: (#4255/#4256)

Mounts on either side or riser. Bow must have flat area on riser the size of a nickel and the hole in riser must allow clearance for ¼" screw.