

Operation Guide 3191

CASIO®

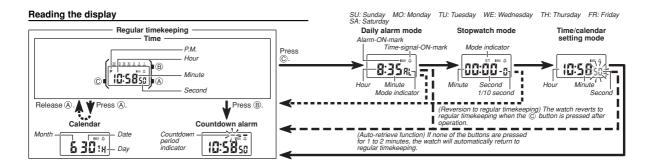

Countdown alarm operation

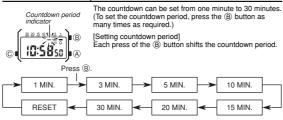

Countdown starts when the (a) button is released. When the countdown reaches zero the alarm will sound for 10 seconds. Pressing any button stops the alarm.

Setting daily alarm

If the daily alarm is set, the beeper sounds for 20 seconds at the preset time every day until cleared. To stop the beeper, press any button. If the time signal is set, the watch sounds every hour on the hour with a "Be-e-ep" signal. (Sound demonstration) Press and hold the (A) button in alarm mode to sound the

 


Press ® in the daily alarm mode to set hours and minutes. Each press of ® advances the alarm setting by 1 hour.


Press ® to set minute digits. Each press of @ advances the alarm setting by 1 minute.

If the © button is pressed, the watch reverts to the regular timekeeping mode (Quick digit advance) When the (A) button is pressed for more than 2 seconds, the digit advances quickly. When released, digit advance will stop.

[ON or OFF setting of daily alarm and time signal]



Stopwatch operation

 

Setting time and calendar

In the time setting mode, first press (a) on a time signal to correct seconds.
 Press (b) to shift flashing position. The digit(s) to be changed will flash.



- 3. Each press of A advances the setting by one. Keep pressed for quick advance 4. Press C to complete setting.

Specifications

Accuracy at normal temperature: ± 30 seconds per month

Display capacity:

Regular timekeeping mode
Hour, minute, second, am/pm, month, date, day (double display)
Calendar system: Auto-calendar (set at 28 days for February)

Countdown alarm mode Input range: 1 to 30 minutes

Daily alarm
 Hourly time signal
 Stopwatch mode
 Measuring capacity: 59 minutes 59.9 seconds
 Measuring unit: 1/10th of a second
 Measuring modes: Net time

Battery: Battery type

CR1216

* Includes an average of 20-second alarm per day.