

Instructions & Care:

⚠️ WARNING!

Do not operate an outdoor appliance or machine with the cover on. Fabric is NOT fire resistant. Keep away from open flames or burning logs.

⚠️ CAUTION!

When covering an outdoor appliance, let it cool before you put the cover on it.

⚠️ CAUTION!

Remove all cushions to avoid possible mildew before covering your furniture.




CLASSIC
ACCESSORIES

ravenna®

Patio Collection

Installation


Check your patio furniture, appliance or machine to make sure there are no sharp objects or corners that could stress your **cover** as you pull it on.

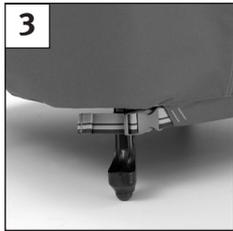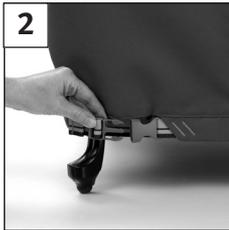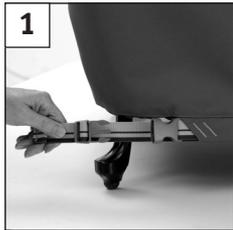

Click-Close Straps:

If your cover has click-close webbed straps, wrap them around your furniture legs and snap shut (figure 1 & 2). You

can adjust the fit by moving the buckle position to shorten or lengthen the strap (figure 3).

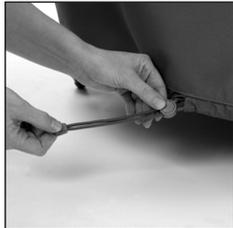

Toggle with Stretch Cord:

If your cover has the toggle with stretch cord hem, you can adjust the length of the cord. Pinch cordlock and

pull bungee to draw hem around base of furniture.



Zippers:

If your cover uses an open-end zipper to close the cover, place the slider at the end of the retainer box. Insert

the pin into the retainer box, then pull the slider to close.

Rip-and-Grip Closures

If your cover has rip-and-grip closures, you can adjust the fit by pulling them apart and repositioning the tabs (figure 4). If your cover has rip-and-grip tabs along a bottom edge, make sure you secure together (figure 5).

Handles: If your cover has handles, use them to help pull the cover over your item.



Cushion Bag: To avoid any possibility of mildew, be sure your bag is completely dry before you store it in an enclosed area for long periods of time.

Cleaning and Care

Clean your cover with a soft brush and lukewarm water. **DO NOT USE SOAP OR DETERGENT** as it may remove the protective coatings added by the factory. Air dry.



DO NOT
USE SOAP OR
DETERGENT



LINE DRY



DO NOT IRON



NO BLEACH



DO NOT
PACK WET