

## GLOCK 17, 17L, 19, 22, 23, 31, 32, 34, 35, 37, & 38

LG-417

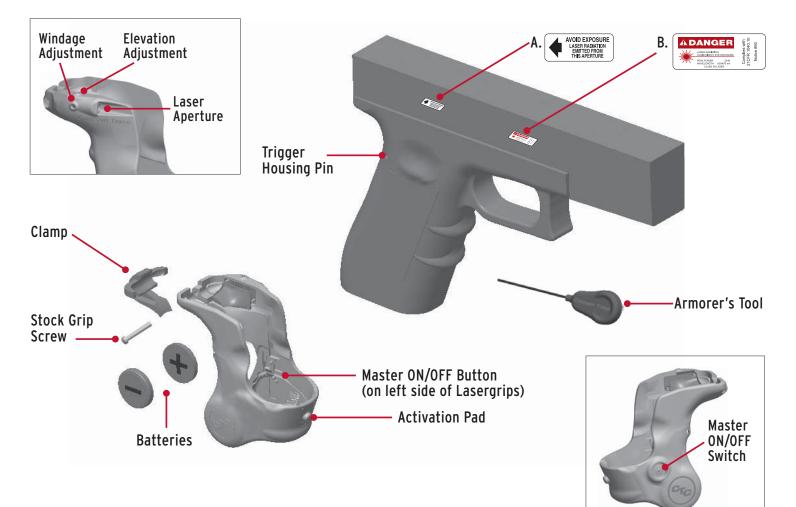

## **PRODUCT SPECIFICATIONS**

BEAM INTENSITY: 5mW peak, 620-670 nm, Class 3R laser DOT SIZE: Approximately 0.5 inches diameter at 50 feet BATTERIES: Two #2032 lithium batteries; over four hours of illumination ACTIVATION: Front-located integrated momentary pressure pad and master ON/OFF switch WARRANTY: Three-year full warranty This product complies with 21 CFR 1040.10

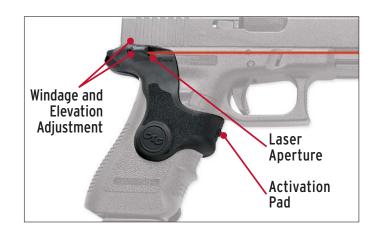

## **INSTALLATION INSTRUCTIONS**

- 1. Make sure firearm is unloaded. Remove magazine and double check that the chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Manual).
- 2. Place one battery straight down into battery well on each Side, with the flat, (+) side visible.
- 3. Slide CTC Lasergrips<sup>®</sup> over the bottom of the firearm and push up until the Lasergrips pops into place.
- 4. Slide the clamp into the back of the Lasergrips. Insert screw (from right to left) and use armorer's tool to tighten down.
- 5. Lasergrips are default set at the factory to be in the "ON" position. Test the master ON/OFF switch

(located on the left side of the Lasergrip) by pressing firmly for less than two seconds, and then pressing the activation pad. The lasershould not activate. To turn back on, firmly press master ON/OFF switch less than two seconds.

6. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

## LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.


Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

NOTE: A SMALL NUMBER OF GLOCKS HAVE A SLIGHTLY DIFFERENT FRAME CONFIGURATION DUE TO MANUFACTURING TOLERANCES (SEE IMAGES) THE VAST MAJORITY OF THE FRAMES WILL UTILIZE THE SMALL CLAMP (IMAGE 1).

If your Glock frame looks like image #1 use the SMALL (S) clamp. If your Glock frame looks like image #2 use the LARGE (L) clamp.

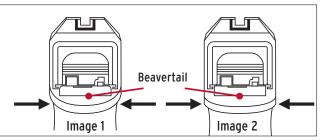

Looking for dependable gun sights? Rely on Crimson Trace for quality and long-lasting products.