

# 6mm Airsoft Pistol GFAP13 MANUAL

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING

**WARNING:** NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYE. EYE PROTECTION MUST BE USED BY THE USER AND ANY PERSON WITHIN RANGE. MAY BE DANGEROUS UP TO 100 YARDS (91.44 METERS). READ OWNER'S MANUAL BEFORE USING.

YOU AND OTHERS WITH YOU SHOULD ALWAYS WEAR SHOOTING GLASSES TO PROTECT YOUR EYES. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRSOFT GUN.

**WARNING:** DO NOT BRANDISH OR DISPLAY THIS AIRSOFT GUN IN PUBLIC – IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.


**WARNING:** THIS PRODUCT CONTAINS ONE OR MORE CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS (OR OTHER REPRODUCTIVE HARM).

## 1. SAFETY FIRST

- ALWAYS treat the AIRSOFT GUN as though it is loaded and ready to fire
- ALWAYS treat the AIRSOFT GUN with the same respect you would a firearm
- ALWAYS store the AIRSOFT GUN unloaded
- ALWAYS store the AIRSOFT GUN away from children
- ALWAYS aim in a SAFE DIRECTION
- ALWAYS keep the muzzle of the AIRSOFT GUN pointed in a SAFE DIRECTION
- ALWAYS keep your finger off the trigger and out of the trigger guard until ready to shoot
- ALWAYS keep the AIRSOFT GUN "ON SAFE" until you are ready to shoot (see section 1A)
- ALWAYS check to see if the AIRSOFT GUN is "ON SAFE" (see section 1A) and unloaded when handing it to or receiving it from another person
- ALWAYS have you and others wear shooting glasses to protect your eyes
- ALWAYS wear shooting glasses over eye glasses if your prescription or reading glasses are not safety glasses
- ALWAYS place the backstop in a location that will be safe should the backstop fail
- ALWAYS check your backstop for wear before and after each use. All backstops are subject to wear and will eventually fail. Replace your backstop if the surface is worn or damaged, or if a ricochet occurs
- ALWAYS use the proper size BB in your AIRSOFT GUN. Check the markings on your AIRSOFT GUN to verify the BB size is 6mm
- NEVER reuse ammunition
- NEVER shoot at hard surfaces or at the surface of water. The BB may bounce off or ricochet and hit someone or something you had not intended to hit
- NEVER attempt to disassemble or tamper with your AIRSOFT GUN. Modifying the function of your AIRSOFT GUN in any way, may be unsafe and will void your warranty
- NEVER point the AIRSOFT GUN at any person or at anything you do not intend to shoot

## 2. LEARNING THE PARTS OF YOUR AIRSOFT GUN

Learning the names of the parts of your new airsoft gun will help you to understand your owner's manual. Use this manual to increase your enjoyment of this airsoft gun.

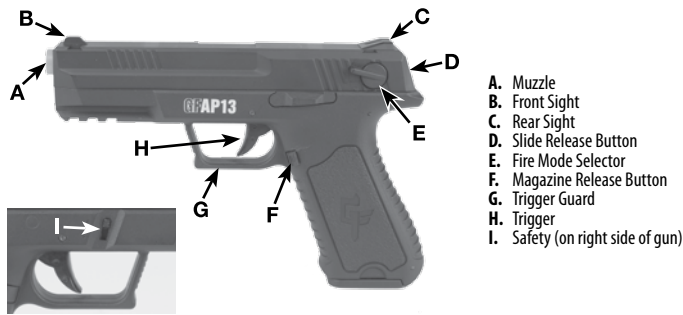

- A. Muzzle
- B. Front Sight
- C. Rear Sight
- D. Slide Release Button
- E. Fire Mode Selector
- F. Magazine Release Button
- G. Trigger Guard
- H. Trigger
- I. Safety (on right side of gun)

## 3. Operating the Safety

**CAUTION:** Like all mechanical devices, an airsoft gun safety can fail. Even when the safety is "ON SAFE", you should continue to handle the airsoft gun in a safe manner.

### A. TO PUT THE AIRSOFT GUN "ON SAFE":

- Locate the safety on the right side of the airsoft gun.
- Push the safety lever down into the "S" position (Fig. 2) for "ON SAFE".

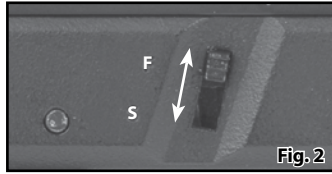


Fig. 2

### B. TO TAKE THE AIRSOFT GUN "OFF SAFE":

- Push the safety lever up into the "F" position for "OFF SAFE".
- When the safety lever on the airsoft gun is in the "F" position, the airsoft gun can be fired.

## 4. Charging, Loading and Removing the Battery

### A. Charging the Battery

- Use only the battery and charger provided with your product.
- Locate the white arrow on the end of the battery.
- Slide the end of the battery with the white arrow into the charging adaptor with the white arrow pointing down (Fig. 3a).
- Plug the charger into the end of the adaptor (Fig. 3b).
- Plug the charger in to a standard 110 v outlet.

**IMPORTANT:** Charge the battery a MINIMUM of 4 hours and a MAXIMUM of 8 hours prior to initial use. This airsoft gun will not operate properly without a fully charged battery.

**CAUTION:** TO REDUCE THE RISK OF FIRE AND/OR DAMAGE TO YOUR BATTERY, DO NOT OVERCHARGE THE BATTERY, UNPLUG THE BATTERY CHARGER WHEN NOT IN USE, AND USE ONLY THE CHARGER SUPPLIED WITH YOUR AIRSOFT GUN.

### B. Loading the Battery

- Make sure the airsoft gun is "ON SAFE" (see Section 1A) and is UNLOADED.
- Point the airsoft gun in a SAFE DIRECTION.
- Push in the slide release button on the rear of the pistol slide and lift the slide up to remove it from the pistol (Fig. 4a).
- With the pistol facing right, insert the battery under the barrel with the white arrow facing inward (Fig. 4b).
- Replace the slide by putting it over the orange tip first and pushing down (Fig. 4c).

### C. Removing the Battery

- Make sure the airsoft gun is "ON SAFE" (see Section 1A) and is UNLOADED.
- Point the airsoft gun in a SAFE DIRECTION.
- Push in the slide release button on the rear of the pistol slide and lift the slide up to remove it from the pistol.
- Pull out on the battery release tab until the battery ejects from its position (Fig. 5).
- Replace the slide by putting it over the orange tip first and pushing down.

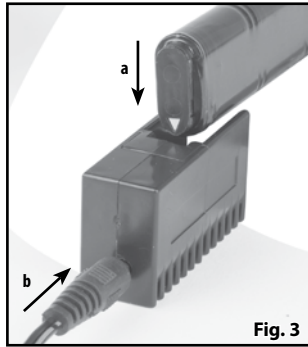 


Fig. 3



Fig. 4a

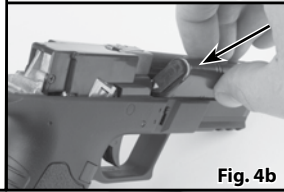 


Fig. 4b



Fig. 4c

## 5. Loading and Unloading Plastic BBs

### A. Loading Plastic BBs

**Note:** For optimum performance use Crosman®, GameFace™, Marines Airsoft® or Duty Calls® 6mm plastic BBs only.

- Make sure the airsoft gun is "ON SAFE" (see Section 1A) and pointed in a SAFE DIRECTION.
- While supporting the bottom of the magazine, press the magazine release button on the left side of the gun, and remove the magazine from the grip.
- Locate the BB guide on the front of the magazine. Pull the BB guide down and hold in place with thumb or finger (Fig. 6a).
- Either by hand or using speedloader (may be included with your product), load up to 30 BBs into the magazine (Fig. 6b).
- Gently release the BB guide.
- Insert the loaded magazine back into the airsoft gun.

### B. Unloading Plastic BBs Without Firing

- Put the airsoft gun "ON SAFE" (see Section 1A) and pointed in a safe direction.
- While supporting the bottom of the magazine, press the magazine release button on the right side of the gun, and remove the magazine from the receiver.
- While pointing the magazine into a container to catch the BBs, press down on the BB retainer buttons on either side of the loading hole (Fig. 7) to release the BBs until the magazine is empty.

**Note:** BBs will release rapidly.

**WARNING:** EVEN THOUGH YOU GO THROUGH THE UNLOADING PROCEDURE, CONTINUE TO TREAT THE AIRSOFT GUN AS THOUGH IT WERE LOADED. DO NOT POINT AT ANYTHING YOU DO NOT INTEND TO SHOOT.



Fig. 5

## 6. Adjusting Hop-Up

Your airsoft gun is manufactured with an adjustable hop-up system. The purpose of this system is to change the spin on the BB as it leaves the muzzle, allowing you to adapt your shot for different distances.

- The hop-up adjustment dial is located underneath the slide of the gun.
- Push in the slide release button on the rear of the pistol slide and lift the slide up to remove it from the pistol.
- Locate the hop-up adjustment dial is located on the left side of the gun (Fig. 8).
- Rotate the wheel clockwise for "MORE" and counter-clockwise for "LESS" hop-up.

## 7. How to Cock and Fire the Airsoft Gun

### A. Choosing your firing mode

**NOTE:** This airsoft gun fires in semi or full-auto mode. Full-auto means it will continue to fire plastic BBs as long as you hold the trigger. Semi-auto means you will have to pull the trigger each time you want to fire a shot.

- For Semi-Auto mode, rotate the fire mode selector switch upward to the "SEMI" position (Fig. 9).
- For Full-Auto mode, rotate the fire mode selector switch downward to the "AUTO" position.

### B. Aiming and Firing Safely

- Your airsoft gun is designed for target shooting and is suited for both indoor and outdoor use. Always remember to place your target carefully. THINK about what you will hit if you miss the target.
- Your airsoft gun is correctly aimed when the front sight blade is positioned exactly in the notch of the rear sight.
- The top of the front sight blade should be even with the top of the notch in the rear sight. The bulls-eye should appear to rest on the top of the front sight (Fig. 10).
- When you are sure of your target and backstop, and the area around the target is clear, take the airsoft gun "OFF SAFE" (see Section 1B), choose your fire mode (see Section 7A), aim and pull the trigger to fire.



Fig. 8

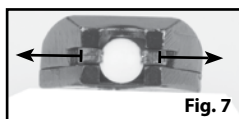


Fig. 7

## 8. Maintaining your airsoft gun

### WARNING:

- DO NOT ATTEMPT TO DISASSEMBLE YOUR AIRSOFT GUN.
- DO NOT MODIFY OR ALTER YOUR AIRSOFT GUN. Attempts to modify the airsoft gun in any way inconsistent with this manual may make your airsoft gun unsafe to use, cause serious injury, especially to the eye and will void the warranty.
- If you drop your airsoft gun, visually check to see that it works properly before you use it again.
- If anything seems changed, like a shorter or weaker trigger pull, this may mean worn out or broken parts. Call Game Face customer service for assistance before using your airsoft gun again.

### A. How to Clean the Magazine

- Make sure the airsoft gun is "ON SAFE" and pointed in a SAFE DIRECTION.
- Remove the magazine and wipe down the outside with a moist towel.
- Replace magazine.

### B. To Clean the Airsoft Gun Barrel

- Never look down the end of the barrel of an airsoft gun.
- Make sure the airsoft gun is "ON SAFE" and pointed in a SAFE DIRECTION.
- Remove the magazine from the gun.
- Spray a cleaning patch with Crosman Nitro Lubricant oil.
- With the cleaning patch on rod (rod may not be included with your airsoft gun), insert it into barrel to clean.
- Make sure rod retains cleaning patch or the patch could get stuck in the barrel of the gun.
- Swab barrel 3-4 times.
- Repeat swabbing procedure with a dry patch.
- Barrel is clean when patches come out clean after dry swabbing.

### C. Clearing a Jam

- Never look down the end of the barrel of an airsoft gun to see if a jam has been cleared.
- Make sure the airsoft gun is "ON SAFE" and pointed in a SAFE DIRECTION.
- Remove the magazine from the gun.
- Insert the tapered end of the cleaning rod into the barrel.
- CAREFULLY and slowly apply more pressure until you push the BB out of the breech.
- Reinstall the magazine and test gun.

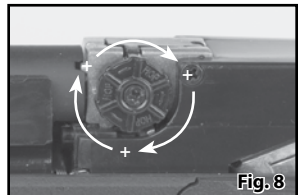 


Fig. 3

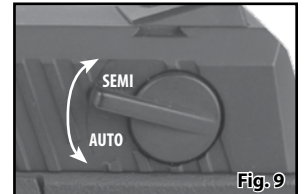 


Fig. 9

## SPECIFICATIONS

Mechanism	Electronic
Sights Front	Fixed post
Sights Rear	Fixed Notch
Caliber/Ammunition	6 mm Plastic BB
Capacity	Up to 30 BBs
Velocity	250 fps
Safety	Slide
Length	8.0"
Weight	1.4 lbs

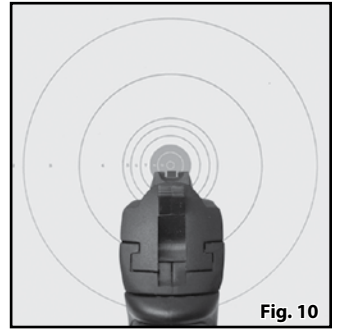 


Fig. 10

**PERFORMANCE:** Many factors can affect velocity, including brand of projectile, type and weight of projectile and barrel condition. For optimum performance use Crosman®, Gameface®, Marine Airsoft® or Duty Calls® branded ammunition only. Use of other airsoft ammunition may cause your product to malfunction and may void your warranty.