

# Vantage PRO2™ INSTALLATION DIAGRAM

## Wireless Vantage Pro2™ System (Console with Sensor Suite)

This diagram shows a Vantage Pro2 sensor suite wirelessly connected to a console. The console is located within a home and the sensor suite is mounted outside. The transmission distance between a sensor suite and console is up to 1000' (300 m) line-of-sight, or up to 600' (180 m) through walls and other obstructions.

