

# Vantage PRO2™ INSTALLATION DIAGRAM

## Vantage Pro2™ Console Receiving Data from up to 8 Different Transmitting Stations

This diagram illustrates how a Vantage Pro2 console can receive data from up to eight different transmitting stations.

