

# Vantage PRO2™ INSTALLATION DIAGRAM

## Transmitting to a Vantage Pro 2 Console and a Vantage Vue Console Simultaneously

This diagram shows a Vantage Pro2 sensor suite wirelessly connected to both a Vantage Vue console and a Vantage Pro2 console. The Vantage Pro2 sensor suite can transmit to both Vantage Pro2 and Vantage Vue consoles. The transmission distance between a sensor suite and console is up to 1000' (300 m) line-of-sight, or up to 600' (180 m) through walls and other obstructions. The consoles can also retransmit to each other, which can allow you to increase the distance between the sensor suite and one of the consoles. Multiple receivers (such as consoles) can "listen" to the same station or set of stations.

