

Vantage PRO2™ INSTALLATION DIAGRAM

Wireless Vantage Pro2™ System (with Weather Envoy)

This diagram shows a Vantage Pro2 sensor suite wirelessly connected to a Weather Envoy™, which is connected to a computer via a WeatherLink data logger. The transmission distance between a sensor suite and an Envoy is up to 1000' (300 m) line-of-sight, or up to 600' (180 m) through walls and other obstructions. The cable (included with WeatherLink) distance between an Envoy with the data logger and a computer is 8' (2.4 m).

