

VANTAGE™

E-Z UP® INSTANT SHELTER®

THANK YOU

for purchasing your E-Z UP® Instant Shelter.® With proper care, this Instant Shelter® will deliver years of trouble-free use. Please take a few minutes to read the use and care instructions in this manual. If you have any questions or require assistance, please contact us.

ABOUT US

THE ORIGINAL & STILL THE BEST

Over 30 years ago, Mark Carter, Founder & Chairman of International E-Z UP, Inc., created the first Instant Shelter.® Today, E-Z UP® Instant Shelters® are still the easiest to open, highest quality, and most durable Instant Shelter® available.

INNOVATION...IT'S IN OUR DNA

Over 150 patents is a testament to our innovation. We are the brand leader in the portable shelter industry, and we maintain this position by continuously innovating our products and processes. We just can't help ourselves; it's in our DNA.

A TRADITION OF THE HIGHEST QUALITY

While our commitment to innovation drives us forward, it is our dedication to quality that defines us. From concept to development to finished product, E-Z UP meticulously designs, engineers and tests the smallest details of construction and material to ensure years of durable use. All of this is supported with extended warranties from a brand you can trust.

IMPORTANT INFORMATION

Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your shelter. Do not use in any potentially windy or rainy weather.
- Wind and rain can damage the E-Z UP® Instant Shelter® product and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® product is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame.
- Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within shelter enclosure.

WARNING

Keep all flame and heat sources away from all shelter fabrics. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

PACKAGE CONTENTS

*Please read each step before you attempt to set up.
Save these instructions for future reference.*

- 1 10' x 10' (3.0 m x 3.0 m) Vantage™ Frame
- 1 Recreational Grade Top
- 1 4-Piece Spike Kit
- 1 Roller Bag

ONE-TIME TOP INSTALLATION

1 UNPACK AND OPEN


- A** Place your E-Z UP® frame in the center of the area to be sheltered.
- B** With partner on the opposite side of the frame, grasp two outer legs, lift the frame slightly off the ground, and step backwards while pulling the frame to open.
- C** Stop when the frame is approximately 3/4 of its fully-opened size.
- D** Set the frame back on the ground.



ONE TIME TOP INSTALLATION

2 ATTACH FABRIC TOP

- A Gently unfold the fabric top, and place it over the semi-opened frame.
- B Attach the fabric top to the E-Z UP® frame by matching the hook and loop strips on the inside of the fabric top corners with the hook and loop strips on each frame corner.
- C Pull the fabric top down over the frame corners — pushing the hook and loop strips firmly together.

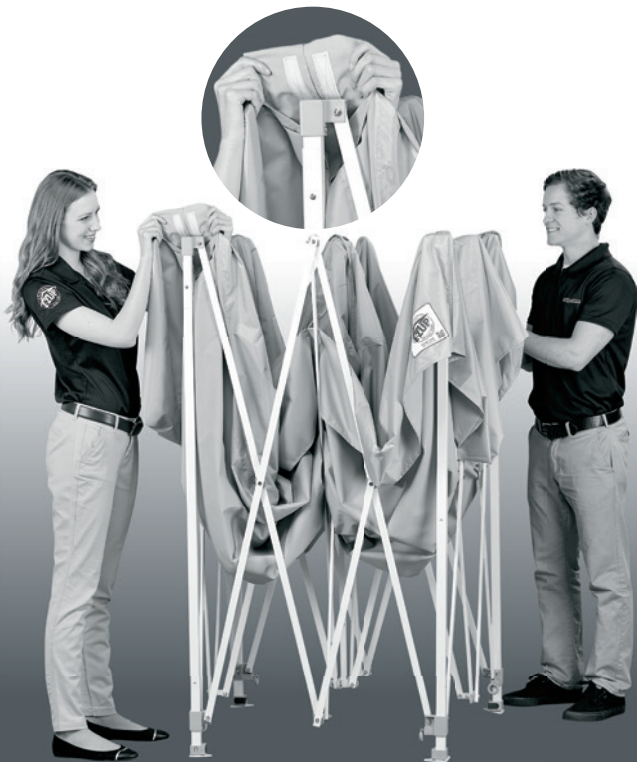

SETUP

3 OPEN E-Z UP® SHELTER

- A With a partner on the opposite side, grasp the bottom of the diamond-shaped area of outer trusses near the "OPEN HERE" sticker.
- B Lift the frame up slightly and step backwards until the shelter is almost fully opened. Gently shake the shelter while opening. Be careful not to pinch fingers!



SETUP

4 SECURE AUTO SLIDER® PULL PIN


- A Fold up the fabric top corner to expose the Auto Slider® Pull Pin.
- B Lift shelter corner slightly off the ground and engage the Auto Slider® Pull Pin by pushing up on the frame trusses with one hand while holding down the top of the frame leg with the other hand. The pins will auto-engage when aligned with the holes on the frame legs.
- C After the Auto Slider® Pull Pin has locked into place, pull the fabric top down over the frame leg, making sure to align and secure the hook and loop strips on the fabric top to the frame.
- D Repeat on all remaining corners.



SETUP

5 EXTEND SHELTER LEGS


- A With a partner, lift the two adjacent outer legs up off the ground simultaneously to about waist height.
 - B Slide the lower/inner legs out until the leg adjustment toggle buttons lock at selected height on each leg. There are 3 adjustment settings for each leg.
 - C Repeat on the remaining legs.
- Note:** It is recommended that you use genuine E-Z UP® Deluxe Weight Bags and/or heavy-duty Stake Kits to secure your Instant Shelter® product.

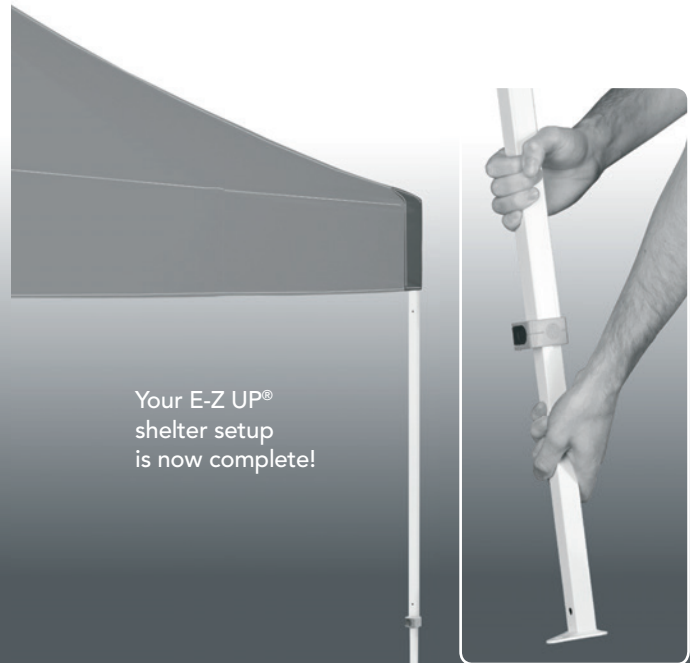

TAKE DOWN

1 COLLAPSE SHELTER LEGS

- A With a partner, slightly lift two adjacent corner legs simultaneously.
- B Depress the toggle button and slide lower/inner legs into upper/outer legs, making sure to do two legs at a time on the same side. Keep the toggle button depressed while retracting leg.
- C Repeat on remaining legs.

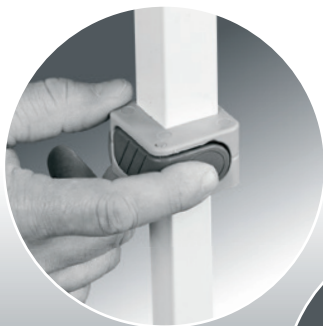

TAKE DOWN

2 RELEASE AUTO SLIDER® PULL PIN


- A With one hand, slightly push up on the truss near the Auto Slider® Pull Pin to relieve pressure.
- B With the other hand, release the Auto Slider® Pull Pin by pulling the ring and push down to ensure that it is disengaged.
- C Repeat on remaining legs.



TAKE DOWN

3 CLOSING SHELTER

- A** Grasp the frame on the top of the diamond-shaped area of center trusses on the opposite sides near the "CLOSE HERE" sticker.
- B** Lift the shelter up slightly, and shake it while stepping towards your partner until the shelter is approximately 3/4 closed. Be careful not to pinch fingers!
- C** Grasp the two outer legs, and push the frame together until it is fully closed.
- D** Give your shelter a hug and place it in the Roller Bag provided.

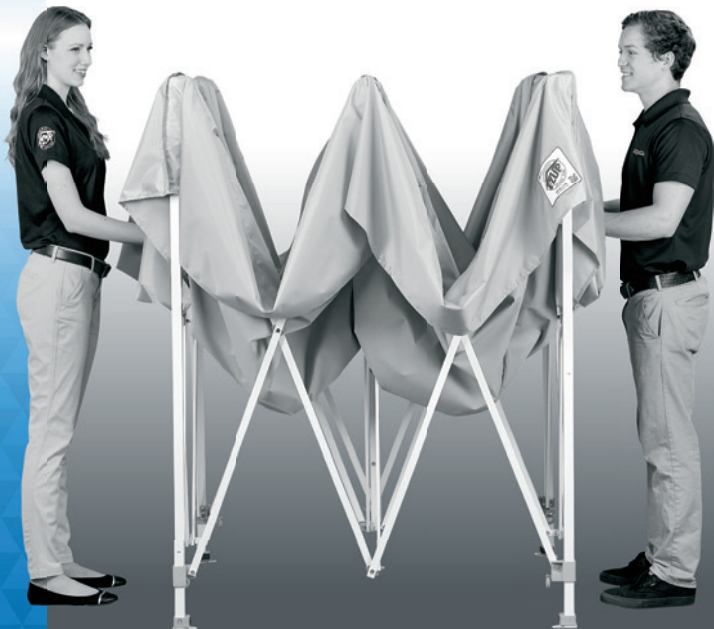


ROLLER BAG

1 ONE-TIME ASSEMBLY

Use the Roller Bag to store and transport your Vantage™ Instant Shelter® and Spike Kit.

One-time assembly is required:

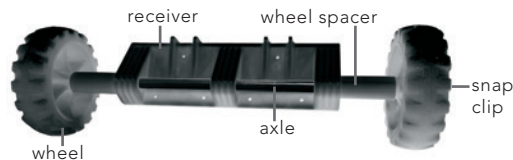

- A** Slide axle through Roller Bag receiver.
- B** Slide the two wheel spacers onto each side of axle (one on each side).
- C** Slide one wheel onto each side of the axle.
- D** Push snap clip over wheel axle end (against wheel).

Your Roller Bag is ready to use!



CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.

PRODUCT WARRANTY



INTERNATIONAL E-Z UP, INC., manufacturer of E-Z UP® Instant Shelter® products, warrants to the original purchaser who provides a dated sales receipt, from an Authorized Dealer, each part of the E-Z UP® Instant Shelter® product to be free from defects in material or workmanship for a period of THREE YEARS after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

AVAILABLE IN 8 **COLOR** COMBINATIONS!

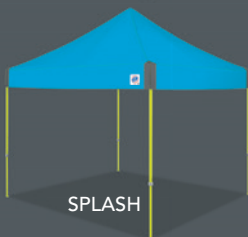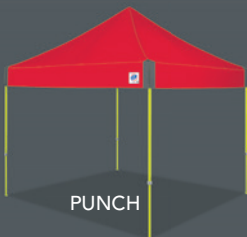

Find out more about tents & accessories we have.