



- 1** Identify all tent components (see list below).


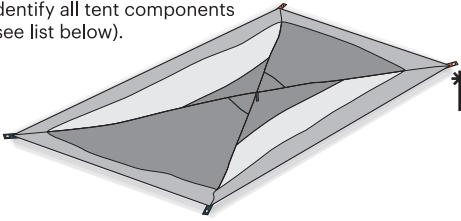


- 2** Spread out tent body and locate 4 corner webbing loops with grommets.

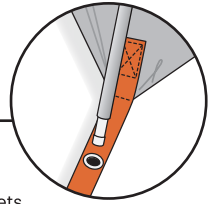


- 3** Assemble 2 frame poles. Insert frame pole tips into each of the 4 corner grommets. Poles should be in an X orientation.

- 4** Attach all tent clips to poles.

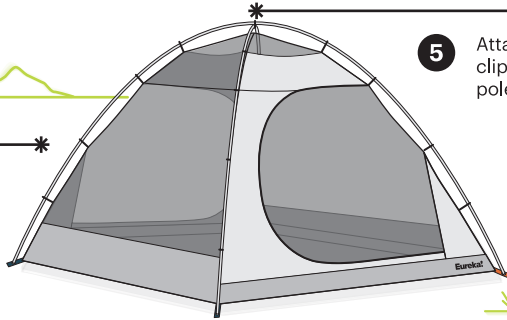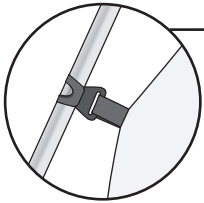


- 5** Attach peak clip to top pole.

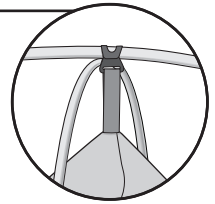

- 6** Stake out 4 corners of tent.





- 7** Assemble fly poles. Insert ends of fly poles into pole pockets located on underside of fly. Fly poles should be parallel.

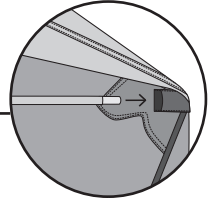

- 8** Place fly over tent body. Match corresponding **BLUE** and **ORANGE** webbing on fly and tent for correct orientation.

- 9** Connect hook and loop fasteners located on underside of fly around tent poles.

- 10** Connect matching buckles on fly at 4 corners. Adjust fly tension via corner webbing. Stake out vestibules.

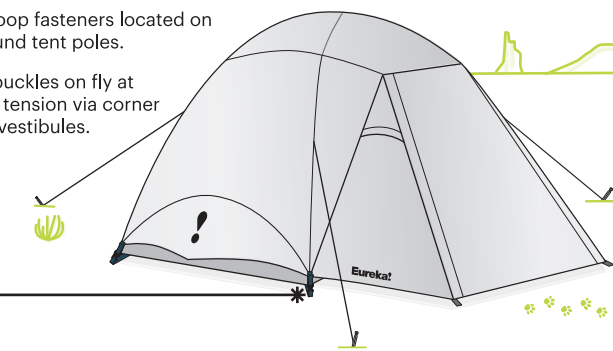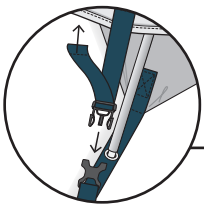

- 11** Stake out all guylines.

TENT CONTENTS

Tent body
Tent fly
Aluminum frame poles (2) LONG
Aluminum fly poles (2) SHORT
Aluminum stakes (14)
Guylines (6)

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty.