





- 1** Identify all tent components (see list below).

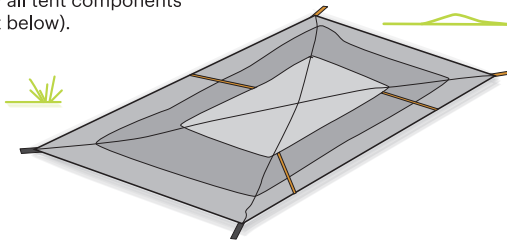


- 2** Spread out tent body and identify the front (2 zippers) and rear (1 zipper) of the tent.

- 3** Assemble all poles.


- 4** Orient peak hub assembly so that the wider angles are facing the front and rear of screenhouse.

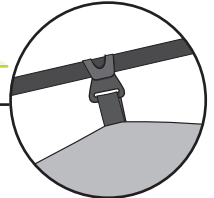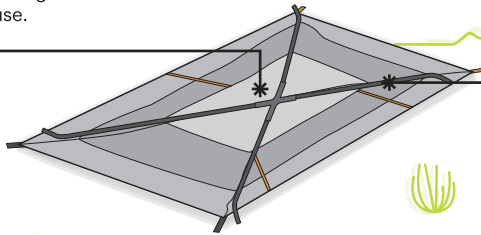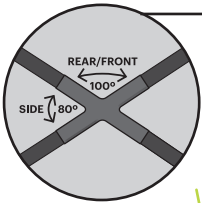


- 5** Attach roof clips to top poles.

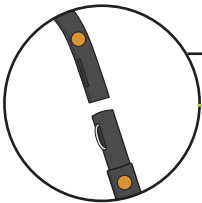

- 6** Insert tapered end of bottom poles into top poles. **Match corresponding sticker colors to ensure proper hub/tent alignment.** Ensure that locking clips have engaged.

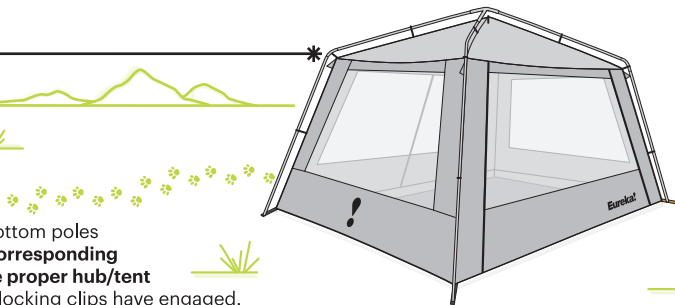


**WARNING** Ensure that peak hub, roof pole, and leg pole sticker colors match the corner webbing. Improper hub/frame alignment will damage the frame.

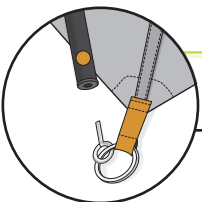

- 7** Insert metal pin into end of each bottom pole.



- 8** Attach all remaining clips to poles.

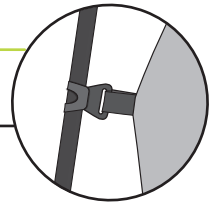

- 9** Stake 4 corners. **NOTE: 4 corners of tent must be staked down to ensure proper stability and operation.**

- 10** Stake guylines as shown. **NOTE: 8 guylines must be deployed as shown to ensure proper stability and operation.**

### TENT CONTENTS

Screenhouse body  
Peak hub + top pole assembly (1)  
Steel bottom poles (4)  
Plastic stakes (9)  
Steel stakes (8)  
Guy lines (8)

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

### TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty.