





- 1** Identify all tent contents (see list below).

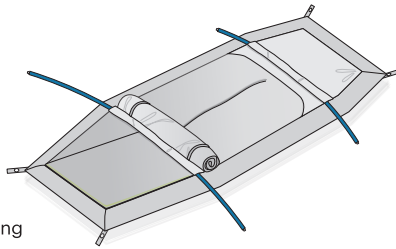

- 2** Spread out tent body and locate the 2 pole sleeves and 4 side webbing loops with grommets.

- 3** PLEASE NOTE that the 2 frame sections are different lengths! Incorrect assembly will damage the tent frame.

- 4** Assemble poles. Identify longer pole (HEAD) and shorter pole (FOOT).

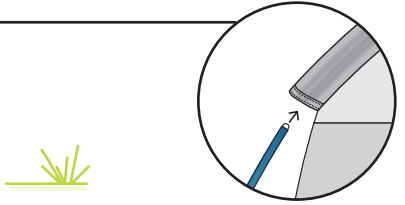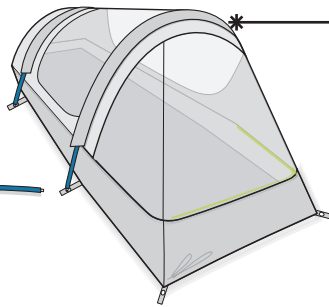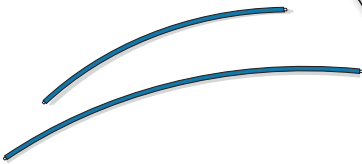


- 5** Insert longer pole through pole sleeve at head (DOOR END) of tent. Repeat for shorter pole at foot of tent.



- 6** Insert pole tips into 4 side grommets.



- 7** Stake out 8 loops of tent.

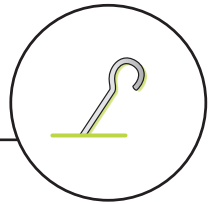

- 8** Place fly over tent body. Hook 8 elastic loops around corresponding stakes. NOTE: Elastic loops on sides of tent near foot should be staked out separately.



- 9** Attach guylines to guyout loops. Stake out all guy lines.

TENT CONTENTS

Tent body + Fly (attached)
Frame pole-long (1)
Frame pole-short (1)
Stakes (13)
Guylines (3)

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior air flow by using the High/Low Air Exchange fly feature and/or fly zipper vents.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty.