

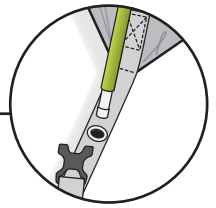


- 1** Identify all tent components (see list below).

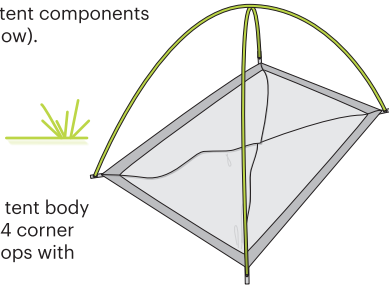


- 2** Spread out tent body and locate 4 corner webbing loops with grommets.

- 3** Assemble main poles. Insert pole tips into each of the 4 corner grommets. Poles should be in an X orientation.

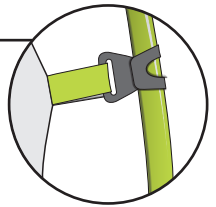


- 4** Attach all tent clips to poles.

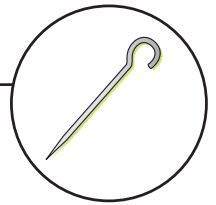

- 5** Stake out 4 corners of tent.



- 6** Place fly over tent body. Match the corresponding blue + gray webbing on fly + tent for correct orientation. Locate hook + loop fasteners on underside of fly + attach to tent poles.

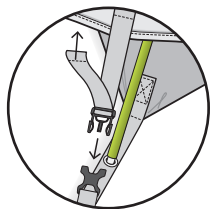

- 7** Connect matching buckles on fly and tent body at 4 corners. Adjust fly tension via corner webbing. Stake out vestibule. Attach guylines to guyout loops. Stake out all guylines (additional stakes required).

### TENT CONTENTS

Tent body  
Tent fly  
Poles (2)  
Stakes (7)  
Guylines (6)  
Gear loft

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior air flow by opening the fly vent.

### TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty.