



- 1** Identify all tent contents (see list below).

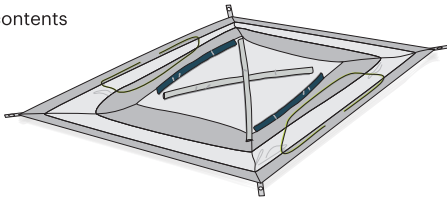

- 2** Spread out tent body and locate 4 corner webbing loops with grommets.



- 3** Assemble 2 main poles (long) and 2 brow poles (short).

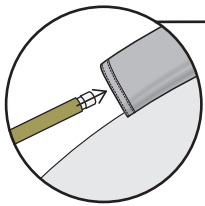

- 4** Insert main poles through the **GREY** crossing pole sleeves located on tent roof.




- 5** Insert main pole tips into each of the 4 corner grommets.

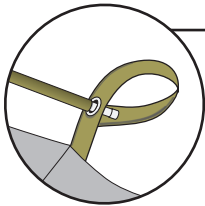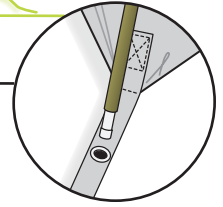

- 6** Insert brow poles through **BLUE** pole sleeves above the front/rear doors making sure the brow poles cross over top of the main poles. Insert brow pole tips into each of the 4 roof grommets.




- 7** Attach all tent body clips to frame and stake down.

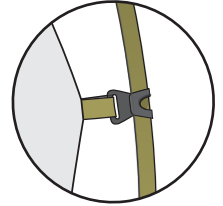

- 8** Place fly over tent body. Locate hook and loop fasteners on underside of fly and attach to tent poles and front rear pole sleeves.

- 9** Connect matching buckles on fly and tent body at 4 corners. Adjust fly tension via corner webbing. Stake out vestibules.

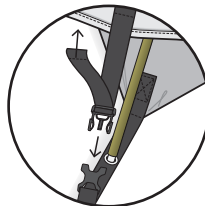

- 10** Attach guylines to guyout loops. Stake out all guylines.



TENT CONTENTS

Tent body + Tent fly
Main frame poles (2-long)
Brow poles (2-short)
Stakes (13)
Guylines (6)
Gear lofts (2)

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows and/or vents on the tent fly.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty.

Check out the collection of camping & hiking products we offer.