
Eureka!

INSTRUCTIONS | Trail Fly 10/14 (2670004/2670007)

SUGGESTED PITCH OPTIONS

The Eureka Trail Fly is a versatile, multipurpose camping accessory. See below for a variety of suggested pitch options. Please note that some pitch options may require additional guylines, tarp poles, and/or stakes. The attached carry bag doubles as an integrated paddle pocket for pitching with kayak/canoe paddles.

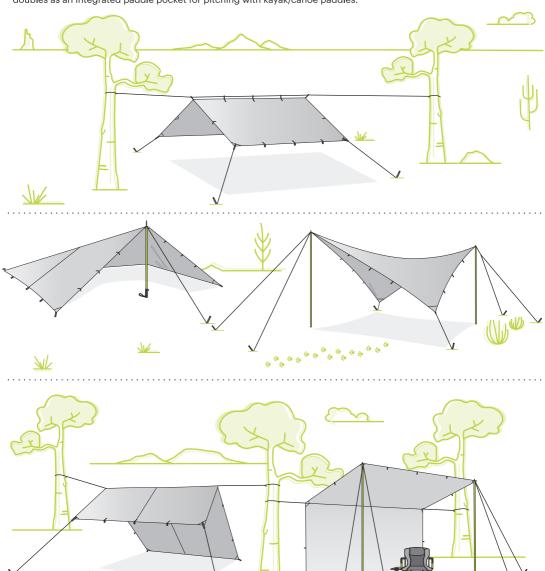

TENT CONTENTS

Tarp Stakes (8) Guylines (8)

TENT TIPS

• Always stake down tarp, including all guyout points.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

• Your Eureka! tent is covered by a limited lifetime warranty.

Check out the collection of camping & hiking products we offer.