

For Surface Models


Sport
2.4GHz
FHSS

Frequency Hopping Spread Spectrum

R603GF

- 2.4GHz SS
- Dimensions: 39x26x10mm
(1.54x1.02x0.39in)
- Weight: 8g (0.28oz)

NOTE: Futaba FHSS system, T2PL-2.4G transmitter and R603GF receiver, does not work with current Futaba FASST system. Please use T2PL-2.4G and R603GF in pairs. Futaba FASST system and FHSS system are not compatible each other.

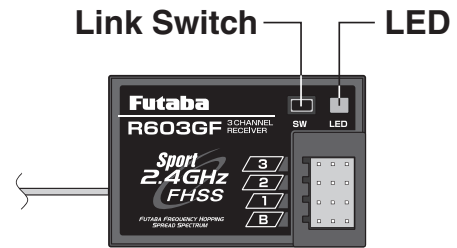

Connectors

- "3" : (No function)
- "2" : Throttle Servo (CH2)
- "1" : Steering Servo (CH1)
- "B": Power connector


How to link the transmitter and the receiver

Each transmitter has an individually assigned, unique ID code. In order to start operation, the receiver must be linked with the ID code of the transmitter with which it is being paired. Once the link is made, the ID code is stored in the receiver and no further linking is necessary unless the receiver needs to be used with an other transmitter. (For T/R set, the link is already done at factory.)

Link procedure

- 1 Bring the transmitter and the receiver close to each other, within one meter.
- 2 Turn on the transmitter and the receiver.
- 3 Push and hold the Link Switch of the receiver.
- 4 When the link is complete, the LED in the receiver changes to solid green.

*Please refer the table below for LED status vs receiver's condition.

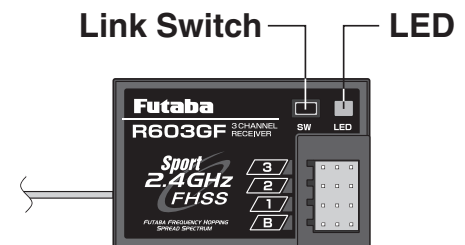

LED status vs receiver's condition:

| | |
|---|---------------------|
| No signal reception | Red : On |
| Receiving signals | Green: On |
| Receiving signals, but ID is unmatched. | Green: Blink |