

IMPORTANT SAFETY RULES Water Slide

185
PO

Read and follow all safety information and instructions. Keep for future reference.
Failure to follow these warnings and instructions can result in serious injury or death to users.

⚠ WARNING

- Assemble and disassemble by adults only.
- The Water Slide is for domestic in-ground swimming pool use only. For indoor and outdoor use.
- This Water Slide is designed to sit on the edge of the pool deck with water surface no more than 12 inches (30 cm) below the pool deck surface, and the float of the slide must be touching the water.
- This Water Slide or its components are not meant for use as life saving device and should not be used as life saving device.
- Do not leave children unattended while device is in use. Use only under competent supervision.
- Never allow diving onto or from this product. Never dive or jump on product.
- For ages: 6+ years. Only one child (max 176 lbs / 80 kg) on the slide at a time.
- Never slide head first or backwards.
- Do not walk or run up the slide.
- Always place slide in the deep end of the pool free from obstructions.
- Sliding, diving or jumping into shallow water can result in serious injury, broken neck, paralysis, or death.
- Inflate all chambers of the Water Slide fully and firmly.


FOLLOW THESE RULES TO AVOID DROWNING, PARALYSIS OR OTHER SERIOUS INJURY.

General:

1. Two or more adults are recommended for setup. No tools are required for the assembly.
2. The product must be installed on a flat and level surface at least 2m away from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
3. Locate the slide out of direct sunlight to reduce the likelihood of scalding. A product that faces north will receive the least direct sunlight.
4. Do not modify this product and/or use accessories not supplied by the manufacturer. There are no serviceable parts.

Set up instructions:

1. Move the product (in its package) to the selected site before inflating – do not inflate the product and drag it since it may result in leaks or damage. Locate the slide in the deep end of the pool such that the slide exit is free from obstructions.
2. Slowly unfold the product and inspect the product for rips, tears or punctures. Do not use if the product is damaged.
3. Inflate the product with a manual or foot air pump until the surface is firm to the touch. If there is any straining at the seams, the product is over-inflated. If any seam begins to strain, immediately stop the inflation and release air to reduce the pressure until signs of stress on the seam are gone. Do not over-inflate or use high pressure air compressor since it may result in seam leaks. The air inside the slide will expand as the temperature increases: double check that the slide is not overinflated throughout the day.
4. Place the inflated slide on the deck of the in-ground swimming pool such that the distance from the deck to the water surface is no greater than 12 inches (30 cm). **WARNING:** Make sure the distance between the deck of the in-ground swimming pool and the water surface does not exceed 12 inches (30 cm) and the floating chamber is touching the water surface
5. Make sure the guidance chamber tube under the slide is touching the side of the deck's edge and not resting on the deck of the in-ground swimming pool.
6. Connect the garden hose to sprayer and set water flow sufficient to adequately wet the sliding surface. Route the garden hose away from traffic to prevent any tripping hazard.

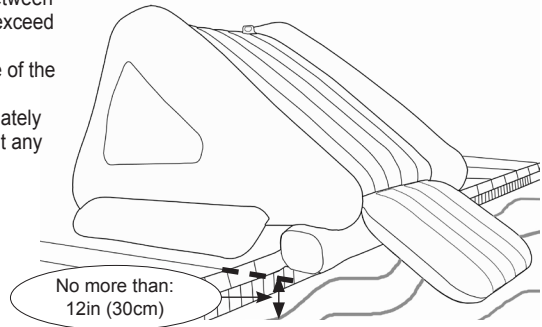

Use of the slide:

1. Do not leave children unattended while slide is in use.
2. Closely supervise children when using the slide.
3. Younger children may have difficulty climbing up the slide. Provide hands on help to younger children.
4. Only one child on the slide at a time. Make sure pool area below slide is clear before allowing the next user to climb the slide.
5. Do not use slide while wearing or holding sharp objects, such as jewelry, hair pin, that can puncture the product.
6. Child should be positioned in the center of the sliding surface.

Maintenance:

Before each use, ensure the slide is properly inflated, and check for holes, leakage, wear and tear and other damage. Never use a damaged slide.

Storage:

1. Rinse and dry the product prior to deflation and storage.
2. Deflate and fold product.
3. Store product inside at temperatures above 32 degrees F (0 degrees C).

Repair patch:

A repair patch has been included with the product to repair small leak and holes. Refer to the instructions on the back of the repair patch.



SAVE THESE INSTRUCTIONS