

# CAMP TRIPOD ASSEMBLY

1. Prior to starting fire, select a cooking area and make sure all tripod parts are accounted for (3 legs, s-hook & chain).

2. Space legs evenly around cooking area. Press down firmly on top of tripod to ensure stability.

3. Hang chain, hook side down, at desired height from s-hook.



**100 YEARS &  
STILL COOKING**

