

MAG-TAC®

LED FLASHLIGHT

**ULTRA
BRIGHT™**
**320
LUMENS**




**CROWNED
BEZEL™**

3 MODES
Momentary
On
Strobe

MAGTAC - SCALLOPED - MILITARY
PMS8003/PMS485/PMS124/REFLEX BLUE/BLACK

- Extremely intense adjustable beam
- 3 modes: Momentary, On, and Strobe (12 Hz)
- Tail cap push-button switch
- Rugged machined aluminum, anodized inside and out

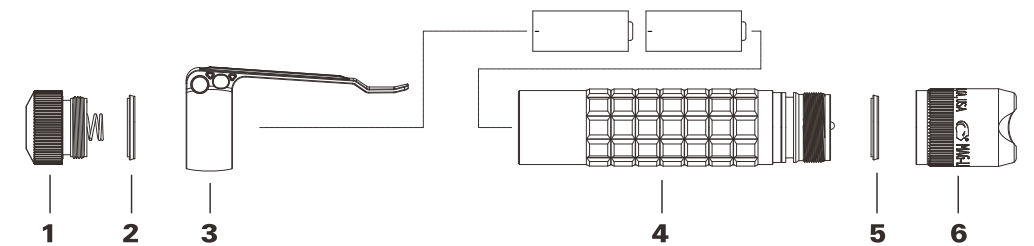

ENGLISH

- 1 Tail cap/Switch assembly*
- 2 Lip seal, tail cap
- 3 Clip
- 4 Barrel/LED Assembly*
- 5 Lip seal, Head
- 6 Head assembly*

*Do not disassemble.

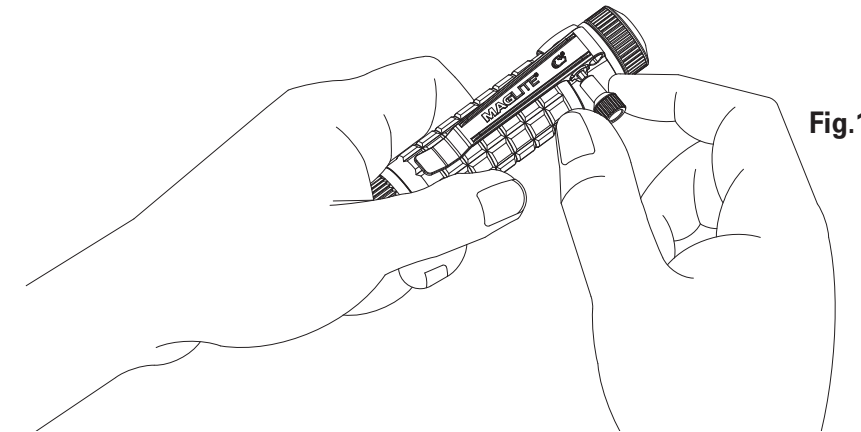


Fig.1

OPERATION: Install two lithium CR123 batteries with the "+" end facing the head end of the flashlight. Backwards installation can damage the LED and electronics. Rotate the head to focus the beam. **"Momentary"** mode: Press tail cap switch button and hold it down; light remains on only until button is released. **"Full Power"** mode: Quickly press tail cap switch twice ("2 Quick Clicks"); light remains on at full power until turned off with one Quick Click. **"PowerSave"** mode: Press switch with 3 Quick Clicks; light will operate at a lower, battery-life-extending power level until turned off with one Quick Click. **To attach the pocket clip (Fig.1):** Remove the tail cap. Using the supplied 2.5 mm hex wrench, be sure the cam lock on the pocket clip is turned to its counterclockwise stop. Slip the pocket clip onto the tail cap end of the barrel and move it down until it stops. Reinstall the tail cap. Using the hex wrench, turn the cam lock clockwise until it stops (about 180 degrees). The pocket clip is now locked in place on the barrel.

INSPECTION AND MAINTENANCE: If flashlight is used less than once a month, remove the batteries between uses. Lubricate all threads and rubber O-rings with petroleum jelly twice yearly. Inspect flashlight monthly and carefully remove any damaged batteries and clean any corrosion.

TROUBLESHOOTING: If flashlight does not turn on or stay on - 1. Replace the batteries. If the problem persists, then 2. Check the tail cap. The metal surfaces contacting the barrel, tail cap and rear battery should be clean, shiny and free of corrosion or other obstruction. Clean as needed.

WARNINGS: CR123 batteries provide very high energy but require precautions TO AVOID RISKS OF FIRE AND EXPLOSION: *Never try to recharge CR123 batteries – when depleted, replace. *Never mix old with new CR123 batteries and never mix brands – always replace the whole set at once, using fresh, new CR123 batteries of the same brand. *Always choose reputable brands for replacement batteries, such as Duracell® and Panasonic®. • AVOID EXPOSING BATTERIES TO FIRE OR EXCESSIVE HEAT, as this may cause leakage or explosion. • To AVOID RISK OF INJURY TO EYES OR SKIN, AVOID CONTACT WITH ANY MATERIAL LEAKED FROM A BATTERY. To AVOID RISK OF EYE INJURY, LOOK AWAY IMMEDIATELY IF BEAM IS SHONE DIRECTLY INTO YOUR EYES. • THIS FLASHLIGHT IS NOT A TOY; not recommended for use by children.