

## GOURMET SERIES GRILL

### TROUBLE SHOOTING GUIDE

Problem	Possible Cause	Possible Solution
<b>Burner will not light with igniter</b>	Igniter/electrode covered with grease or residue	<i>Clean igniter electrode</i>
	Igniter/electrode too far from burner	<i>Adjust electrode until proper spark appears</i>
	Igniter/electrode wire loose or disconnected	<i>Reconnect wire between igniter &amp; electrode</i>
	Wire is shorted causing spark from wire before electrode	<i>Call Magma</i>
	No spark being generated	<b>Call Magma</b>
<b>Burner will not light even with match</b>	No gas flow	<i>Check fuel level, refill cylinder or replace canister</i>
	Obstructed gas flow/debris or spider webs in burner tube	<i>Clean valve orifice and burner check all lines</i>
<b>Flare-up</b>	Excessive cooking temperature	<i>Operate only on low when lid is closed</i>
		<i>Reduce flame level</i>
		<i>Leave lid open</i>
		<i>Use water spray to cool</i>
	Grease and/residue build-up	<i>Clean components</i>
	Excessive fat in meats	<i>Trim fat from cuts of meat before grilling</i>
Excessive oils in marinades	<i>Use non-oil based marinades</i>	
<b>Yellow sooty flame</b>	Obstruction of gas flow/debris or spider webs in burner tube	<i>Check and clean valve orifice and burner</i>
<b>Blow-out</b>	Flame too low	<i>Increase flame</i>
	Wind directly on burner	<i>Block wind when opening lid</i>
	Obstructed gas flow	<i>Clean burner or valve orifice</i>