

Q: How do I set or reset the combination on my backpack lock model #1542, 1544, 1547, 1548 or 1554?

A:

Here are the instructions on how to reset the combination on your backpack lock (which is pre-set at the factory to open to combination 0-0-0):

- With dials at 0-0-0 (or combination the lock was previously set to), push in the shackle
- With shackle pushed in, set your new combination
- Release shackle and scramble wheels to lock
- Be sure to record your NEW combination as you are the only one who knows it!

When it comes to quality travel organizers & accessories, Master Lock is the brand you can depend on.