

NR-720

OPERATION:

- Insert 2 x AAA batteries into the battery compartment, insert the earphone plug into earphone jack then listen
- Switch the volume on/off to turn on the radio
- Adjust the volume to your desired listening level.
- Choose your radio broadcast AM or FM
- Rotate the tuning knob to your desired radio station
- Turn OFF the radio by rotating the volume control to OFF mode.

Features:

- AM/FM Radio
- High Sensitivity Frequency
- Elegant Design
- Neck strap

Remarks:

- Be sure to turn off your volume control and remove your earphone from the jack when not in use.
- Always remove the batteries from the battery compartment to prevent leakage, if you are not using your unit for a long period of time.
- Do NOT mix OLD & NEW batteries.

SPECIFICATIONS:

- Frequency Range AM – 530 – 1710 KHz & FM - 88.0 – 108.0 MHz
- Power Source – 2 x AAA Batteries (Not Included)

Learn more about [other portable radios](#) by [Naxa](#) on our website.