



## Instruction Manual LGC-550XL

US PATENT 9,713,217



### WEAPON SAFETY

**PLEASE BE SURE TO READ, UNDERSTAND AND FOLLOW THESE SAFETY AND OPERATING INSTRUCTIONS WHEN HANDLING A FIREARM OR THE NIGHTSTICK LGC WHEN MOUNTED ON A FIREARM. FAILURE TO DO SO CAN BE DANGEROUS AND COULD RESULT IN SERIOUS INJURY, DAMAGE TO PROPERTY, OR DEATH.**

Use of a firearm under any circumstance is inherently dangerous. SERIOUS INJURY OR EVEN DEATH may result without proper training in the safe handling of firearms. Proper training should be obtained from an accredited firearms safety program conducted by a qualified instructor.

Read, understand and follow all of the safety instructions that came with your firearm before attaching your new LGC.

- Always assume every firearm is loaded and treat that firearm as such.
- Never point a firearm at anything that you are not willing to destroy.
- Never service your firearm or your LGC when mounted on a firearm without first activating the weapon's safety (if applicable), removing the magazine, opening the action and physically and visually inspecting to make sure that no ammunition is installed in the firearm.

### BEFORE ATTACHING, INSPECTING OR SERVICING THE LGC

- Engage the safety on the firearm (if applicable).
- Remove the magazine from the firearm (if applicable).
- Open the action and visually and physically inspect the chamber to be sure it is empty.
- Keep the barrel pointed in a safe direction at all times and never place your hand in front of the muzzle.

**WARNING: IT IS IMPERATIVE THAT SAFETY MEASURES BE EMPLOYED AT ALL TIMES WHILE HANDLING A FIREARM.**

### GENERAL SAFETY WARNINGS

- NOT FOR USE ABOVE HAZARDOUS LOCATIONS
- DO NOT use in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required.
- DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the flashlight.
- DO NOT expose the batteries to water or salt water, or allow the batteries to get wet.
- DO NOT store the batteries with metallic objects that may cause a short circuit.
- Immediately discontinue use of the batteries if they emit an unusual smell, feel hot, change color, change shape or appear abnormal in any way.
- Keep out of the reach of children.

### INSTALL THE BATTERY

**SAFETY WARNING: ALWAYS REMOVE THE LIGHT FROM ANY FIREARM BEFORE CHANGING THE BATTERY.**

- Unscrew and remove the bezel.
- Insert the included CR123A battery with the positive(+) end first.
- Replace the bezel and tighten until fully seated. You will feel a resistance as you tighten past the lockout detents. Continue tightening until the dot on the bezel aligns with the ON position.

**SAFE MODE:** To disable the battery and prevent the light from unintended activation, turn the bezel counter-clockwise until the mark on the bezel aligns with the OFF position.



Battery Safe Mode.

### INSTALL THE LIGHT ONTO YOUR LONG GUN

The firearm must have an available section of Picatinny rail.

- Push inward on the rail clamp tension thumbscrew to fully open the rail clamp.
- Align the insert tab with the appropriate slot on the Picatinny rail of your firearm. Rotate the rail clamp of the LGC onto the Picatinny rail so that the insert is fully seated in the slot.
- While making sure that the insert remains fully seated in the slot, fully tighten the rail clamp tension thumbscrew using a small coin.

**IMPORTANT: Periodically check to insure that the Allen screws and rail clamp tension thumbscrew remain tight.**

### OPERATION

To activate battery, the mark on the bezel must be aligned with the ON position. The left and right switches operate independently.

- Turn on/off: Press down and release.
- Momentary on: Press and hold for .5 seconds or longer, release to turn off.



LGC-550XL on AR-15