



Instruction Manual MT-220

**THANK YOU FOR SELECTING THE NIGHTSTICK MT-220!
SAVE THESE INSTRUCTIONS**

Please read these instructions before using this product. They include important safety and operation information.

WARNINGS

- NOT FOR USE ABOVE HAZARDOUS LOCATIONS
- DO NOT use in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required.
- DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the flashlight.
- DO NOT expose the batteries to water or salt water, or allow the batteries to get wet.
- DO NOT store the batteries with metallic objects that may cause a short circuit.
- Immediately discontinue use of the batteries if they emit an unusual smell, feel hot, change color, change shape or appear abnormal in any way.
- Keep out of the reach of children.

STROBE WARNING

Exposure to strobing lights may cause dizziness, disorientation, and nausea. A very small percentage of people suffer from photosensitive epilepsy and may experience seizures or blackouts triggered by strobing lights.

OPERATION

The MT-220 has five light modes: momentary flashlight, high-brightness flashlight, medium-brightness flashlight, low-brightness flashlight and strobe. The MT-220 has a single tail-cap switch providing access to all modes.

MOMENTARY FLASHLIGHT MODE

Lightly press the tail-cap switch for momentary operation. Release the switch to turn the light off. Because the MT-220 is a multi-function light, if the momentary flashlight mode is activated within 2 seconds of having turned off the flashlight, the next mode in the flashlight's operation will be activated. If more than 2 seconds have elapsed since turning off the flashlight, the high-brightness mode will be activated the next time the tail-cap switch is pressed.

CONSTANT-ON

Press the tail-cap switch until it clicks and then release for constant-on in high-brightness mode. Press and release the tail-cap switch again to turn the light off. Because the MT-220 is a multi-function light, if the constant-on flashlight mode is activated within 2 seconds of having turned off the flashlight, the next mode in the flashlight's operation will be activated. If more than 2 seconds have elapsed since turning off the flashlight, the high-brightness mode will be activated the next time the tail-cap switch is pressed.

SELECT BRIGHTNESS LEVEL

Press the tail-cap switch either partially (momentary mode) or until the tail-cap switch clicks (constant-on mode) multiple times in a row, and the flashlight will cycle to the next mode in the flashlight's operation (high-brightness, medium-brightness, low-brightness and strobe). At that point, the next press of the tail-cap switch (within 2 seconds) will start the flashlight's mode over again with high-brightness. When the desired brightness level (or strobe mode) is reached, simply stop cycling through the brightness selection process. To turn the light off from momentary mode, simply release the tail-cap switch. To turn the light off from constant-on mode, simply press the tail-cap switch one more time.

WARRANTY

LIMITED LIFETIME WARRANTY

Bayco Products, Inc. warrants this product to be free from defects in workmanship and materials for the original purchaser's lifetime. The Limited Lifetime Warranty includes the LEDs, housing and lenses. Rechargeable batteries,

