

30 Watt Hand-Grip Type Megaphone With Siren

Models: PMP30



QUICK GUIDE

FEATURES

- Dry Cell Operation
- Full ABS Body, Sturdy & Lightweight
- Built-in Siren & Microphone

- Clear Sound, Long Range & Efficient Design
- Conveniently Located Volume Controls & Switch


what Batteries does this use

Aug 20,
2018

D
batteries

OPERATION

- Open the back cover by pressing down on the 'Open' Button
- Insert 4 x UM-1 Cells then close back cover until locks into position. Now, you're megaphone is ready for operation.
- To activate the megaphone, press the 'ON/OFF' button on the back cover.
- When using the megaphone, place your lips as close as possible to the megaphone when speaking. Adjust the 'Volume Control' to the desired level without causing any howling or feedback.
- Press the 'Music' button to activate soft music. Or press the 'Siren' button to activate emergency siren/alarm. To switch off the alarm, press the same button again, or press the 'ON/OFF' button.

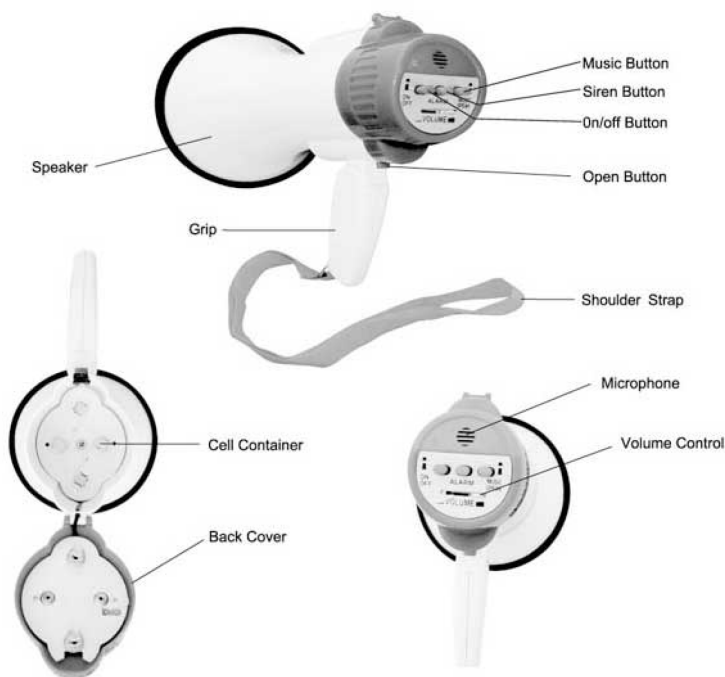

PRECAUTIONS

Ensure correct polarity of cells used. Insert the batteries in the correct direction by aligning the (-) marks on the batteries with the spring in the back cover.

Use new batteries/cells whenever possible.

When the megaphone is not in use for a long period of time, remove the dry cells and replace.

Drained cells or rechargeable battery will not give sufficient sound volume.

SPECIFICATIONS:

- **Power Output:** 30 Watts
- **Voice Range:** 800 Yards
- **Power Source:** 4 x UM – 1 Cells (Not Included)
- **Battery Life:** 6 – 8 Hours
- **Microphone:** Unidirectional
- **Dimensions:** Diameter: 6 1/4" x Length: 10"
- **Weight:** 1.15 LBS.

Design & Specifications subject to change without prior notice