

# DYNAMIC 50 WATT MEGAPHONE

W/ USB FUNCTION

Model: PMP58U

## QUICK GUIDE



Megaphone for handheld or shoulder-slung use (strap supplied). Detachable anti-howl microphone on coiled lead with on-off switch and volume control. Metal and ABS construction.

### Operating instructions

1. When carrying the megaphone on the shoulder, press the (1) press-to-talk power on-off switch, on the left side of the microphone.
2. When holding the megaphone at the grip, fix the microphone hanger inlet in the microphone fixing hanger, then press the (2) press-to-talk power on-off switch back with your index finger.
3. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
4. Turn the sound volume control, on the right hand side of the microphone and adjust the sound level to max without causing howling.

### USB FUNCTION INSTRUCTIONS

Plug in the USB device, switch the LOCK button on the left side of microphone to the top. Now the USB drive is well connected, and the megaphone will play the first file automatically. From there, you can choose the one you like and adjust the volume according to the diagram on the right. When you stop using the disk, please switch the lock button to the bottom, and then unplug it.

### NOTICE:

1. You can play the music on the disk and speak at the same time, they will not affect each other.
2. If you don't need to speak when you play music, turn off the volume control, this way it can turn down the noise and save the battery.
3. Please don't touch the USB device while the indicator light is flashing.
4. The max capacity of the USB device is no more than 6GB, and it will only identify MP3 format.

 
### OPERATING INSTRUCTIONS OF THE PANEL

- ◀◀ Selects the previous track  
(Long press decreases the volume)
- ⏸ Pause/Play (Long press to stop)
- ▶▶ Select the next track  
(Long press increases the volume)






### Notes

1. Make sure the batteries are inserted correctly, observing correct polarity.
2. Remove the batteries when the megaphone is not in use for a long period of time.
3. Drained batteries do not give sufficient volume. Replace the batteries at regular intervals.

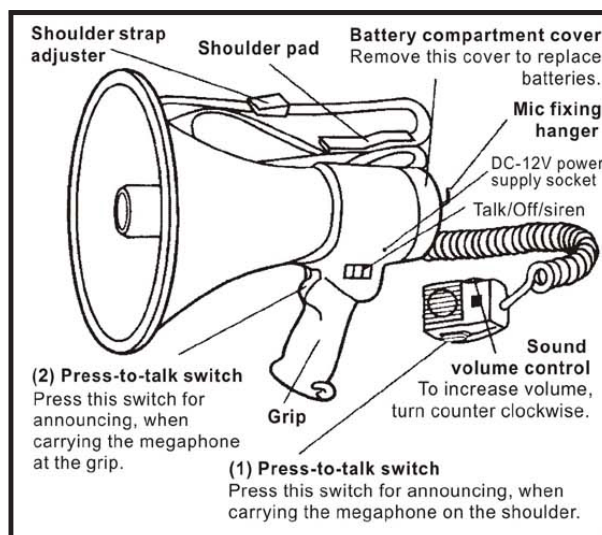

### TO REPLACE BATTERIES

   1. Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.
2. Insert 8 x **type-C** (UM-2) batteries in the battery case observing correct polarity.
3. Insert the battery case with batteries into the battery compartment of the megaphone, paying attention to polarity.

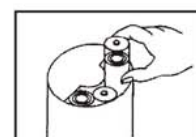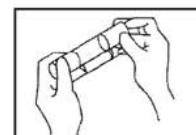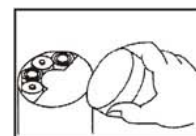

### SPECIFICATIONS & FEATURES:

- **Projection Range:** Up To One Mile
- **Modes:** Talk And Siren
- For Indoor/Outdoor Use
- Variable Volume Control
- Ergonomic Grip w/ Lightweight Chassis
- USB Input to Play From Flash Drive up to 6GB
- **Power:** 50 Watts
- **Powered by:** 8 X C Batteries, Not Included
- **Dimensions:** Diameter 9" X Length 13 3/4"
- **Weight:** 4.38 lbs.