


1. Volume Knob
2. LCD Display
3. Mode Button
4. Set Button
5. AM/FM Switch
6. Timing Knob
7. Speaker
8. Battery Compartment
9. Strap

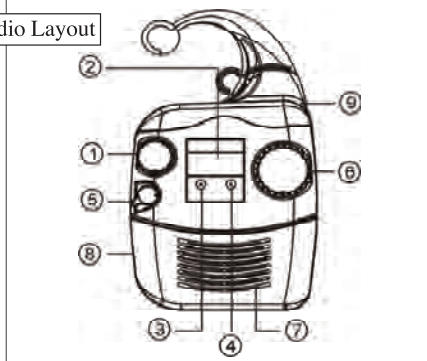

Model No.:PSR6

Radio Layout



### BATTERY INSTALLATION

1. Open the Battery Compartment (8) by turning the lock in either direction and gently pulling it off.
2. Insert 3 x AA batteries, making sure to match the polarity (+ and -) as shown in the diagram on the inside of the battery compartment.
3. Replace the compartment door.

### USING THE RADIO

1. Rotate the Volume Knob (1) clockwise to the radio on. Use the Volume Knob to adjust the volume to your liking.
2. Use AM/FM Switch (5) to select a band.
3. Use the Tuning Knob (6) to locate your desired radio frequency.
4. Rotate the Volume Knob (1) counterclockwise to turn the radio off.

### SETTING THE LCD CLOCK

1. Press the Mode button (3) twice to set the month.
2. Use the Set button (4) to cycle through the months.
3. Press Mode to set the day, using the Set button to cycle through each day.
4. Press Mode again and use the Set button to set the hour.
5. Press Mode again and use the Set button to set the minutes.

6. Press Mode to exit and return to clock.

**Note:** You can press the Mode button once to have the display switch between displaying the time and the date.

### CARE AND HANDLING

- Do not submerge in water or other liquids.
- Do not disassemble the product for any reason.
- Do not expose to extreme temperatures.
- Do not drop, throw, smash or otherwise cause physical shock.
- Do not use cleaners with chemical agents.
- Do not short-circuit the battery terminals.
- Do not use rechargeable batteries.
- Do not mix old and new batteries.
- Remove exhausted batteries.
- Batteries should be installed and replaced by an adult only.
- Remove batteries when not in use.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium / Ni-MH) batteries.