 


Please read instructions carefully to understand how to operate your Timex® watch. Your model may not have all of the features described in this booklet.

## FEATURES

- Date and time display
- Daily alarm
- 24-hour countdown timer
- Chronograph

## BASIC OPERATIONS

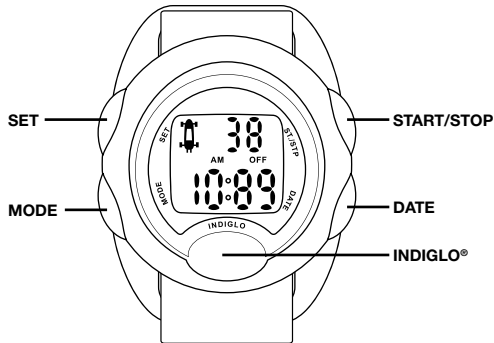

Press **MODE** to cycle through CHRONO, ALARM, and TIMER modes. Press **INDIGLO** to illuminate watch face. In any mode, press **MODE** to view time display. Press any button to stop alarm or timer beeps.

## TIME AND DATE

- Press and hold **SET**. HOURS digits will flash.
  - Press **START/STOP** or **DATE** to change hour digits. Go through 12 hours for AM or PM.
  - Press **MODE** to select MINUTES.
  - Press **START/STOP** or **DATE** to change.
  - Repeat to set MONTH, DATE, DAY, 12- or 24-hour time display, DAY-MONTH or MONTH-DAY date display.
  - Press **SET** when done.
- Press **DATE** to display date. Press again to display time.

## CHRONOGRAPH

- Press **MODE** until CHRONO appears.
- Press **START/STOP** to start. indicates chrono is on.
- Press **DATE** to view lap or split time. Display pauses for 7 seconds.
- Press **START/STOP** to pause.
- Press **START/STOP** to resume.
- When timing is stopped, press and hold **DATE** to reset chrono.

## ALARM

- Press **MODE** until ALARM appears.
- Press and hold **SET** to select HOURS. Digits will flash.
- Press **START/STOP** or **DATE** to change hour digits. Go through 12 hours for AM or PM.
- Press **MODE** to select MINUTES.
- Press **START/STOP** or **DATE** to change. Press **SET** when done.
- Press **START/STOP** to turn alarm on or off. indicates alarm is on.

When alarm time is reached, watch will beep and **INDIGLO**® display will flash for 20 seconds, or until a watch button is pushed. Alarm will repeat every 24 hours until deactivated.

## TIMER

- Press **MODE** until TIMER appears.
- Press and hold **SET** to select HOURS. Digits will flash.
- Press **START/STOP** or **DATE** to change digits.
- Press **MODE** to select MINUTES. Press **START/STOP** or **DATE** to change.
- Repeat to set SECONDS.
- Press **SET** when done.
- Press **START/STOP** to start timer. indicates timer is running.
- Press **START/STOP** to pause, press again to resume.
- When timer is stopped, press **DATE** to reset timer to the beginning.
- Press and hold **SET** to set new countdown time.

Watch will beep when countdown ends.

## INDIGLO® NIGHT LIGHT WITH NIGHT-MODE® FEATURE

- Press **INDIGLO** to activate light. Electroluminescent technology used in the **INDIGLO**® night-light illuminates watch face at night and in low light conditions.
- Press and hold **INDIGLO** for three seconds (beep will sound) to activate or de-activate NIGHT-MODE® feature.
- While in **NIGHT-MODE**® feature, press any button to illuminate watch face for 3 seconds.

## WATER RESISTANCE

If your watch is water-resistant, meter marking or ( ) is indicated.

Water-Resistance Depth	p.s.i.a. * Water Pressure Below Surface
30m/98ft	60
50m/164ft	86
100m/328ft	160

\*pounds per square inch absolute

**WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS UNDER WATER.**

- Watch is water-resistant only as long as lens, push buttons and case remain intact.
- Watch is not a diver watch and should not be used for diving.
- Rinse watch with fresh water after exposure to salt water.

## ELASTIC WRAP

Each Timex Kids watch has an adjustable, stretch fabric, washable strap. To adjust the strap:

 
- Place end of elastic strap up through first buckle opening and then down through second buckle opening.
- Adjust strap to desired length.



## FAST WRAP STRAP

Some watches have FAST WRAP straps. To adjust the strap:

- Slide end of strap through D-ring.
- Pull tight to adjust and fasten for snug and comfortable fit.

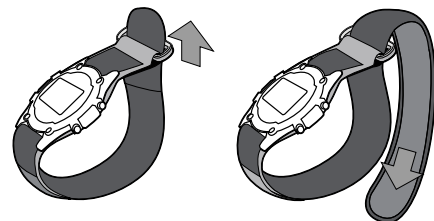



## **BATTERY**

**Timex strongly recommends the watch battery be replaced by retailer or jeweler.** If applicable, push reset button when replacing battery. Battery type is indicated on caseback. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage.

**DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.**

## **TIMEX WORRY-FREE REPLACEMENT PLAN (UNITED STATES)**

TIMEX understands that kids often lose things, even their most prized possessions. That is why your new watch is covered by the exclusive TIMEX WORRY-FREE REPLACEMENT PLAN. If your new watch is lost, TIMEX will replace it with the same style (or similar if your style is not available) at a reduced price for up to one year from the original date of purchase, with no questions asked.

## **TIMEX WORRY-FREE REPLACEMENT PLAN (CANADA)**

Timex understands that kids often lose things, even their most prized possessions. That is why your new watch is covered by the exclusive TIMEX WORRY-FREE REPLACEMENT PLAN. If your new watch is lost, TIMEX will replace it with the same style (or similar if your style is not available) at the price below for up to one year from the original date of purchase, with no questions asked.

## **TIMEX WORRY-FREE REPLACEMENT PLAN (UNITED KINGDOM)**

TIMEX understands that kids often lose things, even their most prized possessions. That is why your new watch is covered by the exclusive TIMEX WORRY-FREE REPLACEMENT PLAN. If your new watch is lost, TIMEX will replace it with the same style (or similar if your style is not available) at a reduced price for up to one year from the original date of purchase, with no questions asked.