

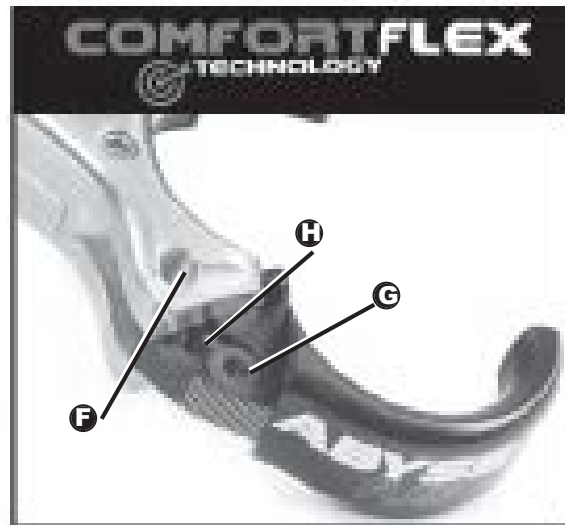


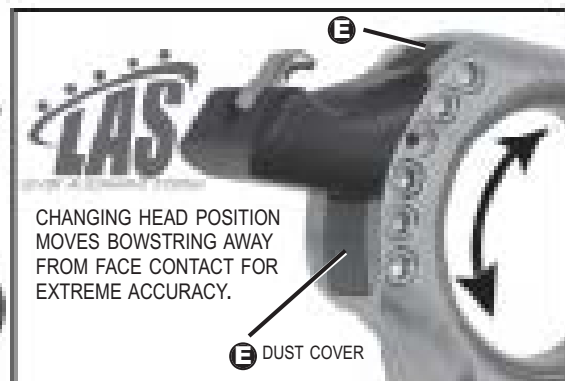

ABYSS FLEX

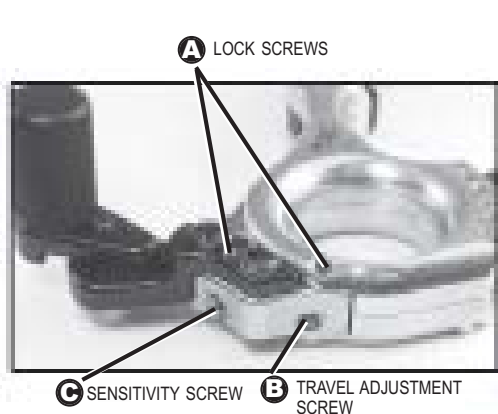

ADJUSTMENT INSTRUCTIONS:

- 1 **TRIGGER TRAVEL ADJUSTMENT:** USE A 0.050" HEX WRENCH TO TURN LOCK SCREWS(A) CLOCKWISE TO ENSURE SCREWS(C) AND (B) DO NOT COME LOOSE DURING USE AND THAT THEY HAVE MODERATE RESISTANCE WHEN ADJUSTMENTS ARE MADE.
- 2 PUSH THE COCKING TAB IN TO COCK. USE A 0.050" HEX WRENCH TO TURN THE TRAVEL SCREW(B) CLOCKWISE SLOWLY UNTIL RELEASE FIRES. THEN TURN THE TRAVEL SCREW(B) COUNTER CLOCKWISE 1/4 TURN FOR SAFE FACTORY SETTING. FOR ZERO TRIGGER TRAVEL AND PERSONAL PERFORMANCE TURN SCREW IN (CLOCKWISE) UP TO 1/8 TURN. *NOTE: TURNING SCREW CLOCKWISE TOO MUCH CAN RESULT IN A MISFIRE. COCK RELEASE AND FIRE IT BY COMPRESSING TRIGGER, DO THIS SEVERAL TIMES TO ENSURE THE RELEASE STAYS COCKED AND FIRES. IF RELEASE DOES NOT STAY COCKED TURN SCREW(B) COUNTER CLOCKWISE 1/16 OF A TURN AND REPEAT TEST COCKING AND FIRING. DO NOT OVERTIGHTEN SCREWS!*
- 3 **TRIGGER SENSITIVITY ADJUSTMENT:** USE A 5/64" HEX WRENCH, TURN SENSITIVITY SCREW(C) COUNTER CLOCKWISE FOR A LIGHTER TRIGGER AND CLOCKWISE FOR A HEAVIER TRIGGER.
- 4 **LAS HEAD POSITION ADJUSTMENT:** USE A 5/64" HEX WRENCH TO REMOVE THE SOCKET HEAD CAP SCREWS(D) ALONG THE SIDE OF THE RELEASE TO RE-POSITION THE HEAD IN YOUR CHOICE OF FOUR DIFFERENT POSITIONS. INSTALL DUST COVERS(E) IN APPROPRIATE LOCATIONS
NOTE: CHANGING HEAD POSITION MOVES BOWSTRING AWAY FROM FACE CONTACT FOR EXTREME ACCURACY.

THE ABYSS AND ABYSS FLEX THUMB TRIGGER RELEASES ARE DESIGNED TO MATCH PERFECTLY IN DRAW LENGTH AND SIZE SPECIFICATIONS WITH THE BACK TENSION FULKRUM AND FULKRUM FLEX RELEASES.

WARNING: BE SURE TO RESET TRAVEL SETTING IF ADJUSTING THE HEAD INTO A NEW POSITION.

CHECK ALL SCREWS ON RELEASE TO INSURE TIGHTNESS BEFORE EACH USE. THINK AND ACT SAFELY!

WARNING:

- * NEVER DRAW BOW WITHOUT AN ARROW!
- * ALWAYS POINT BOW AT A SAFE TARGET! NEVER POINT BOW IN AN UNSAFE DIRECTION!
- * DO NOT LET GO OF THIS RELEASE DURING THE SHOT PROCESS!
- * NEVER PULL THE RELEASE TOWARD FACE WHEN DRAWING BOW!
- * INSPECT EQUIPMENT BEFORE USE TO INSURE PROPER OPERATING CONDITION!
- * FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN EQUIPMENT DAMAGE OR INJURY!
- * THINK AND ACT SAFELY!

FINGER PIECE PERFECT FIT ADJUSTMENT: USE A 5/64" HEX WRENCH TO LOOSEN SCREW(F). FLEX HANDLE INTO DESIRED POSITION AND RETIGHTEN.
WARNING: DO NOT OVERTIGHTEN!

ADDING OR REMOVING FINGER PIECES: USE A 5/64" HEX WRENCH TO REMOVE SCREW(F). NOTE: SMALL WASHER(G) IS CONTAINED IN INNER POCKET(H) BE CAREFUL NOT TO LOSE WASHER. INSTALL DESIRED FINGER PIECE/PIECES. ENSURE SMALL WASHER(G) IS INSTALLED INTO THE CLOSED END OF INNER POCKET(H). PUSH FINGER PIECE ALL THE WAY INTO THE HANDLE. ENSURE SCREW(F) PASSES THROUGH WASHER(G) AND RETIGHTEN.
WARNING: DO NOT OVERTIGHTEN!