

GOAT

TRIGGER MODE ADJUSTMENT INSTRUCTIONS:

- INSURE RELEASE IS IN TRIGGER MODE -

TRAVEL ADJUSTMENT INSTRUCTIONS

- 1) TO ADJUST TRAVEL, PLEASE NOTE THAT THERE SHOULD BE RESISTANCE FROM THE TRAVEL LOCK SCREW FELT WHEN YOU ARE ADJUSTING THE TRAVEL ADJUSTMENT SCREW . IF TRAVEL ADJUSTMENT SCREW . FELS LOOSE THEN TIGHTEN THE LOCK SCREW CLOCKWISE UNTIL THE TRAVEL ADJUSTMENT SCREW FEELS STIFF.
- 2) DEPRESS COCKING BAR TO COCK WHILE KEEPING FINGERS AWAY FROM TRIGGER.
- 3) TURN TRAVEL SCREW (A) SLOWLY CLOCKWISE UNTIL THE RELEASE FIRES. THEN TURN TRAVEL SCREW (A) COUNTER-CLOCKWISE (OUT) 1/4 TURN FOR A SAFE SETTING.
- 4) TO INSURE SETTING IS SAFE, REPEAT STEPS 2 AND 3.

SENSITIVITY ADJUSTMENT INSTRUCTIONS

- 1) TO ADJUST SENSITIVITY, PLEASE NOTE THAT THERE SHOULD BE RESISTANCE FROM THE SENSITIVITY LOCK SCREW FELT WHEN YOU ARE ADJUSTING THE SENSITIVITY ADJUSTMENT SCREW

 SCREW
 1. IF SENSITIVITY ADJUSTMENT SCREW FEELS LOOSE THEN TIGHTEN THE LOCK SCREW CLOCKWISE UNTIL THE SENSITIVITY ADJUSTMENT SCREW FEELS STIFF.
- 2) TURNING SENSITIVITY ADJUSTMENT SCREW (1)
 CLOCKWISE (IN) 1/4 TURN INCREMENTS WILL MAKE THE
 TRIGGER SENSITIVITY HEAVIER. FOR LIGHTEST SETTING,
 MAXIMUM SCREW POSITION IS 1/16" ABOVE HANDLE. NEVER
 COMPLETELY REMOVE SENSITIVITY SCREW, TO INSURE LOCK
 PATCH DOES NOT FALL OUT INSIDE RELEASE.
- NOTE: COUNTER CLOCKWISE ADJUSTMENT WILL MAKE THE TRIGGER SENSITIVITY LIGHTER
- NOTE: TURNING SENSITIVITY ADJUSTMENT SCREW IN CLOCKWISE TOO FAR MIGHT RESULT IN A RELEASE THAT WILL NOT COCK.
- NOTE: WHENEVER TURNING THE SENSITIVITY SCREW COUNTER-CLOCKWISE (OUT), ALWAYS RESET YOUR TRAVEL ADJUSTMENT INSTRUCTIONS
- NOTE: NEVER COMPLETELY REMOVE ANY ADJUSTMENT SCREWS TO INSURE LOCK PATCH DOES NOT FALL OUT INSIDE RELEASE.


HINGE MODE ADJUSTMENT INSTRUCTIONS:

- INSURE RELEASE IS IN HINGE MODE -
- 1) LOOSEN SEAR LOCK $oldsymbol{0}$ BY TURNING IT COUNTER-CLOCKWISE 3/4 OF A TURN OR UNTIL IT STOPS.
- 2) TURN MICRO-ADJUST SCREW CLOCKWISE FOR LESS HINGE TRAVEL (HOTTER)
- 3) TURN MICRO-ADJUST SCREW COUNTER-CLOCKWISE FOR MORE HINGE TRAVEL.
- 4) LOCK SEAR LOCK CLOCKWISE UNTIL TIGHT, LOCKING THE SEAR IN ITS NEW POSITION.

ADJUSTMENT PROCEDURE: UNLOCK SEAR LOCK — MICRO-ADJUST — LOCK SEAR LOCK



CHECK ALL SCREWS ON RELEASE TO INSURE TIGHTNESS BEFORE EACH USE. THINK AND ACT SAFELY!

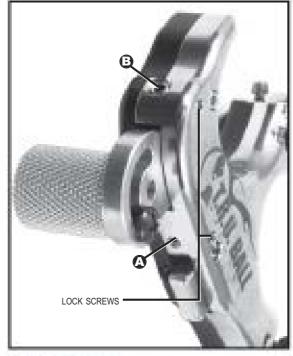



ULTRA-FLEX PERSONALIZED FIT SYSTEM: ADDING AND REMOVING FINGER PIECES

USE A 5/64" HEX WRENCH TO REMOVE SCREW (3). NOTE: SMALL WASHER IS CONTAINED IN INNER POCKET (3) BE CAREFUL NOT TO LOSE WASHER. INSTALL DESIRED FINGER PIECE/PIECES. INSURE SMALL WASHER (3) IS INSTALLED INTO THE CLOSED END OF INNER POCKET (3). PUSH FINGER PIECE ALL THE WAY INTO THE HANDLE. INSURE SCREW (3) PASSES THROUGH WASHER (3) AND RETIGHTEN. WARNING: DO NOT OVERTIGHTEN!

WARNING:

- * NEVER DRAW BOW WITHOUT AN ARROW!
- * ALWAYS POINT BOW AT A SAFE TARGET! NEVER POINT BOW IN AN UNSAFE DIRECTION!
- * DO NOT LET GO OF THIS RELEASE DURING THE SHOT PROCESS!
- * NEVER PULL THE RELEASE TOWARD FACE WHEN DRAWING BOW!
- * INSPECT EQUIPMENT BEFORE USE TO INSURE PROPER OPERATING CONDITION!
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN EQUIPMENT DAMAGE OR INJURY!
- * THINK AND ACT SAFELY!