

RAVE



RAVE ADJUSTMENT SETTINGS

TRAVEL ADJUSTMENT INSTRUCTIONS

- 1)TO ADJUST TRAVEL, PLEASE NOTE THAT THERE SHOULD BE RESISTANCE FROM THE TRAVEL LOCK SCREW FELT WHEN YOU ARE ADJUSTING THE TRAVEL ADJUSTMENT SCREW. IF TRAVEL ADJUSTMENT SCREW FEELS LOOSE THEN TIGHTEN THE LOCK SCREW CLOCKWISE UNTIL THE TRAVEL ADJUSTMENT SCREW FEELS STIFF.
- PINCH JAW CLOSED TO COCK WHILE KEEPING FINGERS AWAY FROM TRIGGER.
- 3) TURN TRAVEL SCREW SLOWLY CLOCKWISE UNTIL THE RELEASE FIRES. THEN TURN TRAVEL SCREW COUNTER CLOCKWISE (OUT) 1/4 TURN FOR A SAFE SETTING.
- 4) TO INSURE SETTING IS SAFE, REPEAT STEPS 2 AND 3.

SENSITIVITY ADJUSTMENT INSTRUCTIONS

- 1) TO ADJUST SENSITIVITY, PLEASE NOTE THAT THERE SHOULD BE RESISTANCE FROM THE SENSITIVITY LOCK SCREW FELT WHEN YOU ARE ADJUSTING THE SENSITIVITY ADJUSTMENT SCREW. IF SENSITIVITY ADJUSTMENT SCREW FEELS LOOSE THEN TIGHTEN THE LOCK SCREW CLOCKWISE UNTIL THE SENSITIVITY ADJUSTMENT SCREW FEELS STIFF.
- 2) TURNING SENSITIVITY ADJUSTMENT SCREW CLOCKWISE (IN) 1/4 TURN INCREMENTS WILL MAKE THE TRIGGER SENSITIVITY HEAVIER. TURNING SCREW IN TOO FAR MIGHT MAKE RELASE UNABLE TO COCK.
- NOTE: COUNTER CLOCKWISE ADJUSTMENT WILL MAKE THE TRIGGER SENSITIVITY LIGHTER
- NOTE: TURNING SENSITIVITY ADJUSTMENT SCREW IN CLOCKWISE TOO FAR MIGHT RESULT IN A RELEASE THAT WILL NOT COCK.
- NOTE: WHENEVER TUIRNING THE SENSITIVITY SCREW COUNTER CLOCKWISE (OUT) OR WHEN COMPLETELY REMOVIING, ALWAYS RESET YOUR TRAVEL ADJUSTMENT PER TRAVEL ADJUSTMENT INSTRUCTIONS

WARNING:

- * NEVER DRAW BOW WITHOUT AN ARROW!
- * ALWAYS POINT BOW AT A SAFE TARGET! NEVER POINT BOW IN AN UNSAFE DIRECTION!
- * DO NOT LET GO OF THIS RELEASE DURING THE SHOT PROCESS!
- * NEVER PULL THE RELEASE TOWARD FACE WHEN DRAWING BOW!
- * INSPECT EQUIPMENT BEFORE USE TO INSURE PROPER OPERATING CONDITION!
- * FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN EQUIPMENT DAMAGE OR INJURY!
- THINK AND ACT SAFELY!