

EYE PROTECTION DESIGNED FOR AIR SOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE. READ ALL INSTRUCTIONS BEFORE USING. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS REGARDING THE PURCHASE, USE, AND OWNERSHIP OF THIS AIRSOFT GUN. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.


DESCRIPTION

- 1 **Stock:** Collapsible
- 2 **Sights:** Flip-Up
- 3 **Magazine:** Loading the BB's
- 4 **Battery:** Insert, removal and exchange
- 5 **Hop-up:** Adjustable
- 6 **Safety:** Safe/Fire
- 7 **Fire selector:** Semi-/Full-Auto
- 8 **Trigger:** Shooting
- 9 **Barrel Plug:** Remove before firing



HK
HECKLER & KOCH
NO COMPROMISE

416
ELECTRIC AIRSOFT

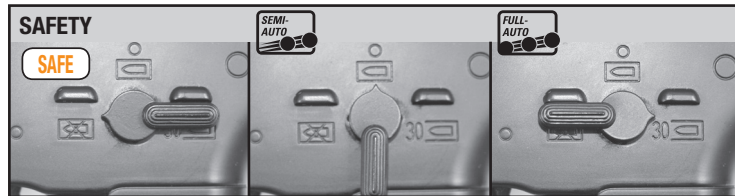

LOADING - BBs

1. Press
2. Insert magazine
3. Fill in a minimum of 40 / maximum of 250 rounds 6 mm BB.
4. Hold magazine upright. Turn tension wheel 100-150 times.

NOTE: Wind tension wheel periodically while shooting to maintain tension on BBs.

Hi CAP 250
6mm AIRSOFT
WEIGHT 0.12g BB

HOP-UP

← Pull

← HOP UP → HOP UP

MAX. RANGE

Distance

CHARGING

Charge max 4 hours

OPERATION

Collapsible stock

Press

BATTERY

1. **CHARGE FOR MAX 4 HOURS**

2. Press
3. Insert battery
4. Connect cables
5. Press

CAUTION! Do not crush the wires.

MAINTENANCE

Fig. 1

- EN** Perform routine inspections and maintenance to maintain proper operation. Put the safety "ON SAFE", remove the magazine. Prepare a thin rod with a length of 50 cm (not included). Attach a piece of cotton fabric to its end and clean the barrel with some silicone oil (Fig. 1).
- CAUTION:**
- Do not force the rod into the barrel, as this could cause damage.
 - Never drip silicone oil directly into the barrel.
 - For airsoft guns with batteries, please recycle used batteries.

WARNINGS

EN BUYER SHOULD BE AT LEAST 18 YEARS OF AGE TO PURCHASE.

WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY, PARTICULARLY TO THE EYES. MAY BE DANGEROUS UP TO 100 YARDS (91.44 METERS).

WARNING: NEVER ASSUME THAT BECAUSE THE AIRSOFT GUN NO LONGER FIRES A BB AND/OR THE MAGAZINE IS REMOVED FROM THE GRIP FRAME THAT PLASTIC BB IS NOT LODGED IN THE BARREL. ALWAYS TREAT THE AIRSOFT GUN AS THOUGH IT IS LOADED AND WITH THE SAME RESPECT YOU WOULD A FIREARM.

SHOOTING

ELECTRIC

Press

SEMI-AUTO

FULL-AUTO

STOP

offset halves

with edges

used, soiled

Ø > 6mm diameter larger than 6 mm

EN Note: Warranty expires if non-recommended BBs are used. It's recommended to use precise BBs from UMAREX.

WARNING: USE .24 CALIBER (6 MM) PLASTIC BBS ONLY IN THIS AIRSOFT GUN. USE OF ANY OTHER AMMUNITION CAN CAUSE INJURY TO YOU OR DAMAGE TO THE AIRSOFT GUN.

WARNING: DO NOT BRANDISH OR DISPLAY THIS AIRSOFT GUN IN PUBLIC - IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

SIGHTS **AIMING**

Flip-Up

CAUTION: ANY MODIFICATION OR TAMPERING WITH AN AIRSOFT GUN MAY CAUSE A MALFUNCTION, MAKE IT UNSAFE TO USE AND WILL VOID YOUR WARRANTY. ANY CHANGE IN PERFORMANCE, SUCH AS A LOWERED TRIGGER PULL FORCE AND SHORTENED TRIGGER TRAVEL, INDICATES POSSIBLE WEAR AND SUCH GUN SHOULD BE INSPECTED, REPLACED, OR PROPERLY REPAIRED. ANY AIRSOFT GUN THAT HAS BEEN DROPPED SHOULD BE CHECKED TO ENSURE ITS FUNCTION HAS NOT BEEN AFFECTED. REPAIRS SHOULD ONLY BE MADE BY AN AUTHORIZED UMAREX USA SERVICE CENTER.