

Brite Nite[™] Dome Lantern[™]



User's Manual

We are constantly improving our products so specifications are subject to change without notice.

Thank you for purchasing the Brite Nite[™] Dome Lantern[™] by Wagan Tech[®]. With normal care and proper treatment, it will provide years of reliable service. Please read all operating instructions carefully before use.



FEATURES

- 12 bright LEDs
- 3 light modes: High, Low and SOS
- Dual function flashlight and lantern
- Dual hooks for hands-free lighting
- Strong magnetic base
- Compact and lightweight



SPECIFICATIONS

Lumens	150 (high), 60 (low)
Run Time	6 hours (high), 10 hours (low)
Battery	3 x AAA batteries
IP Rating	IPX4—water resistant
Impact Resistance	1 meter
Beam Distance	15 meters

CAUTION

- This product is not a toy: Do not allow children to play with or near this item.
- Do not store in direct sunlight or near a heat source.
- Use for intended purposes only.
- Do not submerge in water.
- This product contains strong magnets that may cause interference with pacemakers and other implanted medical devices when placed within a close proximity. Keep this product at least 6 inches from your chest if you have a pacemaker.

INSTALLING THE BATTERIES

- 1. Locate the indicator marks (\blacktriangle \checkmark) on the battery compartment.
- 2. Twist battery compartment counter clockwise until indicator mark \blacktriangle aligns with Open \blacktriangledown .

- 3. Install 3 AAA batteries.
 - For best performance, always replace all batteries at the same time. Do not mix old and new batteries or batteries of different types (alkaline, heavy duty, and rechargeable).
- 4. Replace the battery compartment by aligning the indicator mark ▲ with Open ▼ and twist clockwise toward Close ▼.



CARE AND MAINTENANCE

- Periodically wipe the entire lantern with a soft clean cloth.
- Batteries should be removed from your unit if it will not be used for an extended period of time.

USAGE

The Dome Lantern has 3 light modes.

- 1. To turn unit on: press the power button
- 2. To change modes: press the power button to cycle through the modes once for each mode (High > Low > SOS > OFF).



If you're looking for quality camp lighting, visit our website.