



## RAZOR X Digital Ear Bud Headset (GWP-NHE)

### DEVICE FUNCTIONS

- **Turning the device on:**

Slide the Power Switch to the ON position. The LED will be illuminated blue while unit is ON. The very first time the device is turned on, the Ambient Volume setting is Sound Level 5 (+3dB). You will hear an audible beep of what mode you're in:

  - Outdoor mode = 1 beep, Indoor mode = 2 beeps
- **Changing Ambient Sound Volume:**

Volume changes respectively when pressing the Ambient Volume Up or Down controls:

  - Volume Up increases volume by one stage.
  - Volume Down decreases volume by one stage.

When Sound Level Changes a single audible beep is produced as an indicator.
- **When Ambient Volume reaches minimum Sound Level (Sound level 0 / Mute):**

There will be an Audible double beep.  
If Volume Down is pressed again at this level, sound level will not change and double beep will be produced again.
- **When Ambient Volume reaches maximum Sound Level (Sound level 9 / +14dB):**

There will be an Audible double beep.  
If Volume Up is pressed again at this level, sound level will not change and double beep will be produced again.
- **Changing Listening Modes:**

Press both Ambient Volume Up and Down buttons at the same time for one second:

  - An Audible single beep will be produced to indicate Outdoor Mode (shorter compression time)
  - An Audible double beep will be produced to indicate Indoor Mode. (longer compression time to compensate for range echo)

After cycling to Indoor Mode, the device will go to Outdoor Mode on next mode change input.
- **Charging the device:**

Slide the power switch to OFF position. Open the Micro USB Connector cover and plug in a Micro USB cable to it and plug the other end of the cable into a USB power source or adapter. While the device is charging the LED will be RED and remain constant ON. When fully charged the device's LED will turn off.

**NOTE:** When device is in the OFF position, the ear buds will still provide passive NRR.

