



 
SILENTCAM

User's Manual


Battery Installation

NOTE: This product requires 8 AA batteries, which are not included.


- 1. Locate the battery compartment by lifting the latch on the right to open the camera like a book. Inside the camera, you'll see the display screen and controls on the left, and the battery compartment on the right.

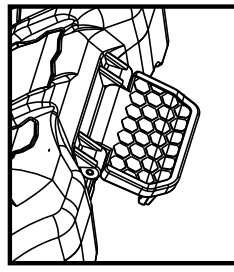

 
- 2. Use two fingers to press the notches at the top of the battery compartment door. The door should come loose, revealing the battery tray.

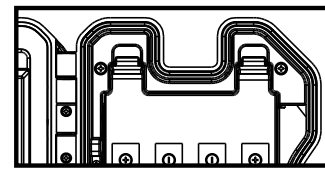

 - 3. Insert all 8 AA batteries by matching the +/- in the compartments with the same +/- on the batteries.

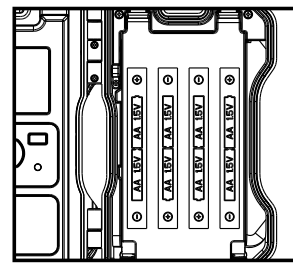

 - 4. Once all 8 batteries are installed, press firmly on the door until both notches snap back into place.

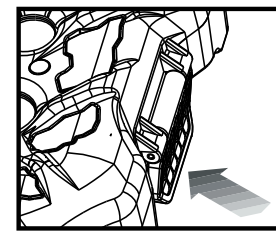


Installing SD Card


NOTE: This product requires an SD card to store images. The SD card is not provided.

BEFORE INSTALLING: If you are using an SD card from another camera, you must format the SD card in your computer prior to installing it in this camera. If you are using a new card, it may go directly into this camera without any formatting.

 
- 1. With the camera door open, locate the SD card compartment below the screen and controls.

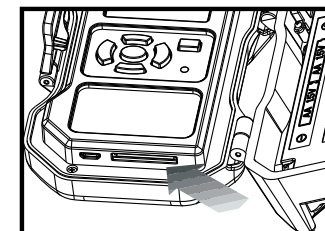

 - 2. Load the SD card with the label facing up, and the side with the grooves inserted first.

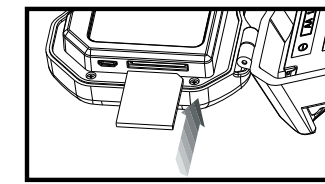

 
- 3. Press the SD card into the slot until you hear a quiet click.

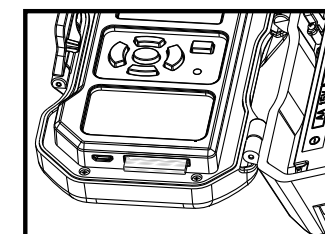


IMPORTANT: The camera should always be powered off before removing or inserting the SD card.

Power

 
- ON:** 1. To turn the camera ON, press the screen should be awake. To wake up the screen, press and release the POWER button located below the right corner of the screen.

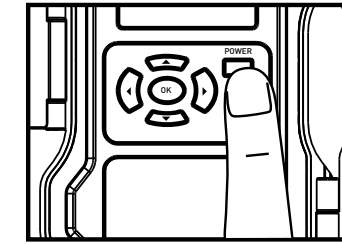

 
- 2. Check the battery level to ensure the batteries are properly charged. If so, you are ready to proceed with camera use.

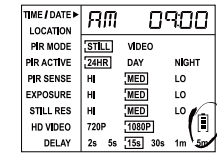

 - OFF:** 1. To turn the camera OFF, the screen should be awake. To wake up the screen, press and release the POWER button.

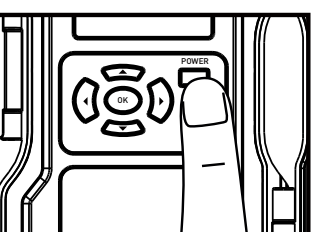


 - 2. Press and hold the POWER button until the screen turns off.

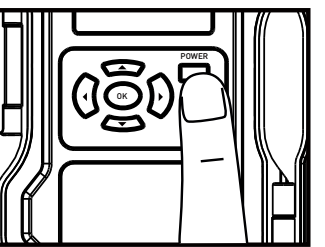

Power Save/Ready Mode

 
- 1. If no buttons are pressed for 30 seconds after turning the power on, the screen will turn off and enter Power Save Mode while the camera will enter Ready Mode.
- 2. During the first 2 minutes of Ready Mode, a red light will illuminate when a PIR event is triggered. The red light will blink for 2-3 seconds while a photo/video is taken.

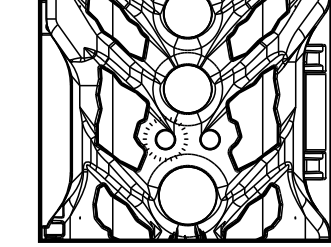


- 3. After 2 minutes, all indicator lights will turn off until a button is pressed. The camera will continue to operate.

Date/Time

 
- 1. To change the date and/or time, use the UP/DOWN arrows to scroll to TIME/DATE and press OK.

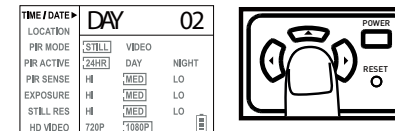

 - 2. This will prompt you to select the proper value for each item in this order: 1) hour; 2) minute; 3) day; 4) month; 5) year. Use the UP/DOWN arrows to select the proper value for each item. Click OK once the proper value is displayed to move onto the next item.

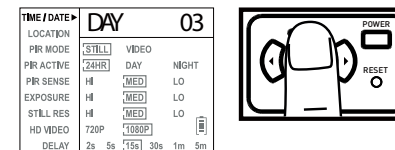

 
- 3. Once you have selected the proper value for the final item [year], click OK to save all the information and return to the main menu.

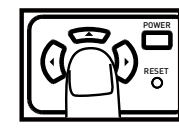


Location

You have the option to save the location where this camera is installed. If you do not wish to use this function, please proceed to the next step.

 
- 1. To name your location, use the UP/DOWN arrows to scroll to LOCATION on the left menu bar and press OK.

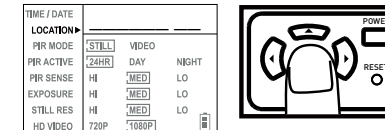

 - 2. You can use up to 8 letters and/or numbers to name your location. Press the UP/DOWN arrows to select each letter/number. Press the LEFT/RIGHT arrows to move between each blank.

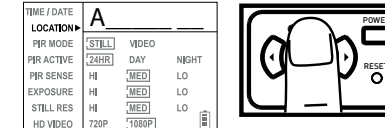

 - 3. When you have your location set, press OK until you return to the main menu navigation. (If you are leaving any blanks, this may take several clicks.)

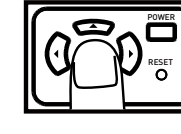


PIR Mode

- 1. If you haven't already been redirected there, use the UP/DOWN arrows to scroll to PIR MODE on the left menu bar and press OK.



 - 2. Use the LEFT/RIGHT arrows to select if you want the camera to take STILL images or VIDEO. Press OK.

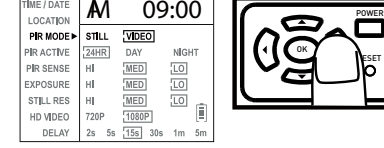

NOTE: If you select to record video, recording time is 15 seconds.

 
PIR Active

This camera features two lenses: one day lens and one night lens. The PIR Active setting allows you to choose what time of day you want the camera to operate and automatically selects the appropriate lens.

- 1. To select the time of day for camera operation, use the UP/DOWN arrows to scroll to PIR ACTIVE on the left menu bar and press OK.



- 2. Use the LEFT/RIGHT arrows to select if you want 24HR, DAY or NIGHT imaging.

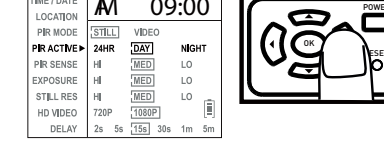


- 3. When your preferred method is highlighted, press OK to select.

NOTE: If you choose 24-hour mode, the camera will automatically transition between the day and night lenses without making a sound.

PIR Sensitivity

There are three levels of PIR Sensitivity. HI: Detects smallest movements MED: Default setting detects most common size movements LO: Detects large movements

 - 1. To select PIR sensitivity, use the UP/DOWN arrows to scroll to PIR SENSE on the left menu bar and press OK.

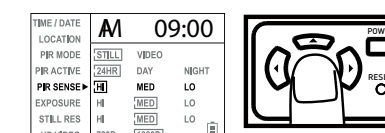


- 2. Use the LEFT/RIGHT arrows to select your preferred PIR Sensitivity and press OK.




Exposure

 - 1. To adjust the exposure, use the UP/DOWN arrows to scroll to EXPOSURE on the left menu bar and press OK.

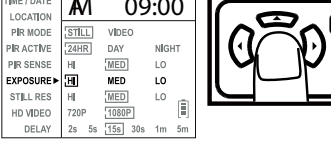

 - 2. Use the LEFT/RIGHT arrows to select your preferred exposure [HI, MED or LOW] and press OK.

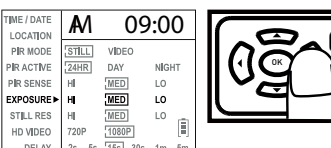

Still Resolution

- 1. To adjust the resolution of still images, use the UP/DOWN arrows to scroll to STILL RES on the left menu bar and press OK.



- 2. Use the LEFT/RIGHT arrows to select your preferred resolution [H, MED or LOW] and press OK.

 


HD Video

- 1. To select the video resolution captured by the camera, use the UP/DOWN arrows to scroll to HD VIDEO and press OK.



- 2. Use the LEFT/RIGHT arrows to select your preferred resolution [720P or 1080P] then press OK.

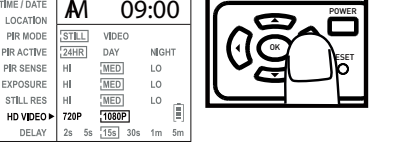


Delay

- 1. To select a delay time between photos and/or videos, use the UP/DOWN arrows to scroll to DELAY and press OK.




 - 2. Use the LEFT/RIGHT arrows to select your preferred delay time [2 seconds, 5 seconds, 15 seconds, 30 seconds, 1 minute or 5 minutes] then press OK.

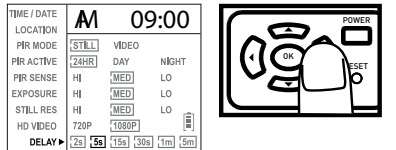


Battery Life Indicator

 - 1. Make sure the screen is turned on.

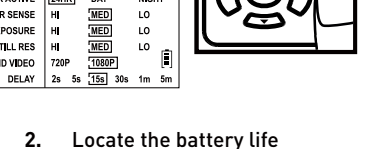

 
- 2. Locate the battery life indicator in the bottom right corner of the screen.

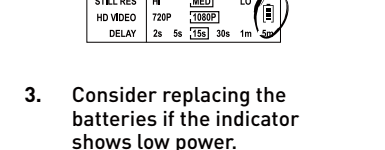

- 3. Consider replacing the batteries if the indicator shows low power.

Reset

 - 1. To return the camera to factory settings, locate the RESET button directly below the POWER button.

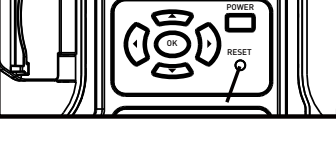


- 2. Use a pencil or other small object to press the RESET button.



Mounting

 - 1. To mount the camera to an object in the field, locate the strap that came supplied with the camera.
- 2. Remove the clip from one end of the strap and slide that end through the two slots on the back of the camera.
- 3. Once the camera is attached, place the clip back on the strap.
- 4. Wrap the strap around the object at the appropriate height and connect both ends of the clip. Pull any excess material on the strap so the camera attaches to the object tightly.

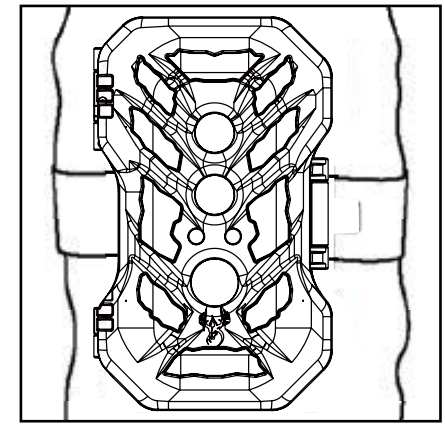

Important

Once you connect the camera to your computer via the USB cable/ports, the camera will then draw power from the computer. When completing the viewing, transferring copying or deletion of images, please make sure that you DISCONNECT THE USB CABLE FROM BOTH THE CAMERA AND THE COMPUTER, as you will not be able to power the camera OFF until you do so.

The directions as contained herein assume that you are using a Microsoft operating system and not Linux or a Mac-based operating system. Even said, there may be slight variations in your process based on the specific version of the operation system that you are using as well as the predefined user preference for each computer. The below listed steps are to serve as a guideline and may have to be slightly modified based on the specific operating system and preference as on your personal computer.

- Tips in the Field**
 - Place the camera 25-30 feet from your target area for optimal image quality.
 - Try to avoid mounting the camera directly facing the rising or setting sun so sunlight isn't directly hitting the lenses.
 - If mounting to a dusty environment (such as a feeder), regularly clean the camera lenses, incandescent flash cover and PIR sensor cover.
 - Periodically check the camera mounting to ensure it doesn't become loose.
 - To keep any water from damaging the unit, the camera door must remain closed with the latch secured tightly while the camera is in use.
 - Regularly remove the battery compartment cover to inspect the batteries for any corrosion build-up, as this may harm the camera.

Retrieving Images

NOTE: This camera does not come equipped with the capability to review images directly on the unit. You will need to use a device that can read and display images from an SD card.

IMPORTANT: When working with images on a computer via a USB cable, it is essential that you DISCONNECT THE USB CABLE FROM BOTH THE CAMERA AND THE COMPUTER once finished. You will not be able to turn the camera off until you do so.

- These instructions are written for a Microsoft operating system. There will be significant variations if using a Linux or Mac-based system, and likely still some variations even if you have a Microsoft system. The steps listed below are basic guidelines and may need to be modified to suit your system and preference.
 - Method 1: Leave SD card in camera**
 - A. First, make sure that the camera is powered OFF. Next, plug the USB cable into the camera and then into the USB port on your computer. Once this is complete (in this order only), then power the camera ON.
 - B. Once complete, your computer may automatically launch 'AutoPlay', a window recognizing a new Removable disk (the camera).
 - C. If so, it should give you three selections:
 - 1. Import pictures
 - 2. View pictures
 - 3. Open folder to view files
 - D. Select the method from the list provided
 - E. If your computer does not automatically launch the AutoPlay window recognizing the Removable Disk (the camera), then you will need to go to the 'Start Menu' at the bottom left of your screen and select 'Computer'. The summary view will then be illustrated on the right hand side of the window where the 'Devices with Removable Storage' will be listed. The computer will recognize the camera as Removable Disk. Please select Removable Disk from this menu (or double click on the graphical icon).
 - F. This will then direct you into the SD Card file folder. Images are in the MEDIA folder.
 - G. Once open, you will then see all of the photo files that are located on the SD Card. Select each image individually to view. The default viewing browser for your computer will then automatically launch.
 - H. Repeat for viewing all or other photos.
 - I. If you determine that you want to delete the image, select the image by placing your cursor on it and clicking your mouse only once. Right click on your mouse and select delete. This will delete the image permanently, so be absolutely sure you want to do this before selecting delete.
 - J. TIP: The software drivers necessary to use and view the camera are automatically downloaded to the computer when you connect your camera to the computer via the included USB cable.

Retrieving Images (SD Card Reader)

- Method 2:** Remove SD card and use card reader
 - A. First, remove the SD Card from the camera unit itself by pressing on it to where it automatically ejects.
 - B. Next, insert the SD card into your SD card reader.
 - C. Once inserted into your computer it may automatically launch 'AutoPlay', a window recognizing a new Secure Digital Storage Device (the SD card).
 - D. If so, it should list several options for the next steps (not limited to the following):
 - 1. Picture Options
 - a. Import pictures
 - b. View pictures
 - c. Copy Disc
 - d. Transfer pictures
 - 2. General Options
 - a. Open folder to view files
 - E. Select the method from the list provided that best suits your requirements. If the selection is made to 'View pictures', you can then view the images located on the SD Card and manipulate them as needed.
 - F. If your computer does not automatically launch the AutoPlay window recognizing the Removable Disk (the SD Card), then you will need to go to the 'Start Menu' at the bottom left of your screen and select 'Computer'. The summary view will then be illustrated on the right hand side of the window where the 'Devices with Removable Storage' will be listed. The computer will recognize the camera unit itself by pressing on it to where it automatically ejects.
 - G. Once open, you will then see all of the photo files that are located on the SD Card. Select each image individually to view. The default viewing browser for your computer will then automatically launch.
 - H. Repeat for viewing all or other photos.
 - I. If you determine that you want to delete the image, select the image by placing your cursor on it and clicking your mouse only once. Right click on your mouse and select delete. This will delete the image permanently, so be absolutely sure you want to do this before selecting delete.

Format SD Card

Having trouble with your SD card? Try this.

- 1. Connect the SD card to your computer. If your computer has an SD card slot you can insert the SD card directly into the port.

NOTE: If you are using a MicroSD card, you will need an adapter to allow it to fit into standard SD card ports. If your computer does not have an SD card port built-in, you can use an external USB card reader that plugs into any USB port on your computer.

- 2. Click the Start or Windows menu and select Computer [Windows Vista/7] or My Computer [Windows XP]. For Windows 8 users, type "computer" and click the Computer icon in the Apps search results.
- 3. Right-click the drive letter associated with your memory device, then select "Format"
- 4. Ensure FAT32 is selected under "File System"
- 5. Ensure "Quick Format" is checked
- 6. Click "Start"

Warranty

DISCLAIMERS WGI Innovations, LTD is not responsible for damage, expense or injury caused by the unauthorized use of, alterations to, improper connection of and abuse or neglect of the WGI Innovations™ products.

WGI Innovations, LTD will replace all workmanship defects free of charge for ONE (1) YEAR after the date of purchase as long as your warranty is in effect. This warranty DOES NOT COVER damage, expense or injury caused by unauthorized repairs, alterations, improper connection, shipping, abuse, theft, accident, neglect or collateral loss. When returning product(s) for service you MUST obtain a Return Merchandise Authorization (RMA) number from WGI Innovations, LTD. Please include name, UPS address (no P.O. Box), telephone number, RMA number and a complete description of the problem on all enclosed correspondence. When possible, pack product carefully in original carton. Customers are responsible for any shipping cost to WGI Innovations™. WGI Innovations™ will pay the shipping cost of replacement product to the customer, but is not responsible for damage incurred in returning items for repair.

DISCLAIMER WGI Innovations, LTD reserves the right to make changes to product features, functionality and physical design at its sole discretion. As a result, such changes may not be reflected in this version of the manual.

FCC

FCC STATEMENT Product Name: Digital Game Scouting Camera Trade Name: Wildgame Innovations

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two criteria: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



SILENTCAM

PLANO SYNERGY

"Wildgame Innovations" and the "Button Logo" are trademarks of Wildgame Innovations, LLC.

