

How to Replace the Flint:



Step 1

First remove the insert from the lighter case.




Step 2

Using a small screw driver or a coin, slowly remove the spring. The spring has tension so be sure it doesn't fly away.



Step 3

Remove the remaining piece of flint by gently tapping the insert against a hard surface. Once it is removed, use an unfolded paper clip to remove any stubborn flint slivers or residue from the flint tube.

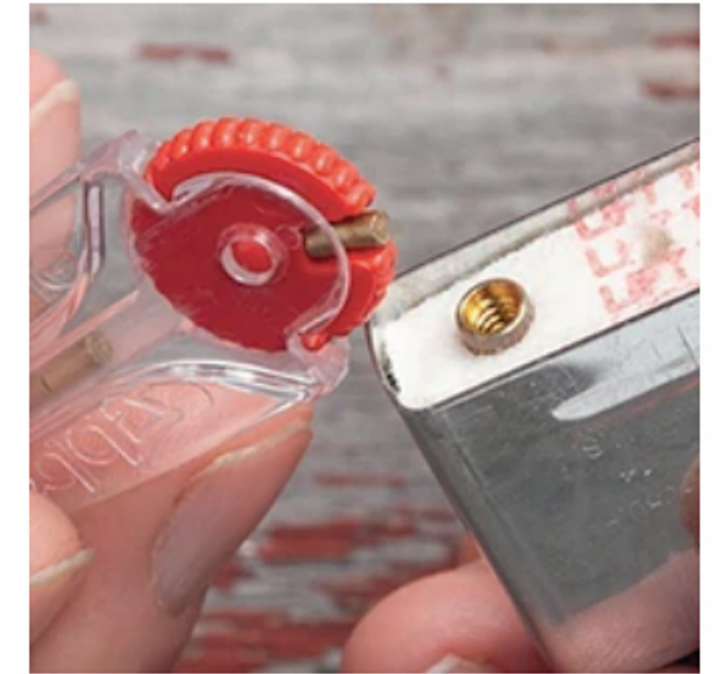

Step 4

Insert a new flint into the flint tube.



Step 5

Replace the flint spring and turn clockwise until tight. If the screw isn't fully tightened the lid will not close.



Step 6

After fully tightening the spring you may want to keep extra flints under the felt pad so you always have them handy for future use.



Step 7

Put the insert back into the lighter case and make sure the lid can fully close. If the flint wheel binds, turn the wheel backwards a few times.