



**HATSAN**  
ARMS COMPANY

Serious. Solid. Impact.



**HERCULES BULLY**

**MANUAL**

**PLEASE READ THIS MANUAL BEFORE USING YOUR AIR GUN**

Thank you for choosing the Hatsan Hercules Bully PCP air rifle.

Always use caution when operating this rifle. Learn and obey the laws of your local municipality, state, and/or country. Demonstrate responsibility while using this air rifle. **Please read this manual completely before handling or shooting your air gun.** It is the sole responsibility of the user to operate this air gun properly and safely.

### **Warning!**

- Each Hatsan PCP air rifle contains pressurized air and should only be dismantled by a competent gunsmith. Do not attempt to dismantle the rifle if the rifle is partially or fully charged. Otherwise serious damage/injury/death may be caused to you or others. The air rifle may also become damaged. Never attempt to dismantle the air cylinder parts or air gauge when the air cylinder is fully or partially charged. Serious injury/death/damage may result if these instructions are ignored because pressurized air is in the air cylinder.
- Use only factory manufactured pellets that are no longer than the thickness of the rifle's magazine. Do not use BB ammunition with your rifle.
- Hatsan PCP air rifles are designed specifically for use with dry compressed air. NO OTHER GAS OR GAS COMBINATION CAN BE USED.

The rifle may be filled from a diver's bottle or a suitable compressor, MAXIMUM SAFE WORKING PRESSURE (SWP) : 250 BAR.

## **GENERAL INSTRUCTIONS**

Before using your new air rifle check that it is fully charged and abide by the following basic safety rules.

### **Basic Safety Rules:**

- Treat every rifle as if it is loaded.
- Never point the rifle at anyone, or allow anyone to point a rifle at you, even if you know it is not loaded.
- Do not brandish or display this product in public – as it may confuse people and could be mistaken as a firearm.
- Always carry the rifle so that the direction of the muzzle is under control, even if you stumble.
- Always be sure of your target and what lies behind it before firing your rifle – this product may be dangerous up to 650 yards.
- Beware of targets that tend to cause ricochets.
- Never leave a loaded rifle unattended.
- It is compulsory that eye & ear protection is worn when charging the cylinder and when shooting.
- This is a high-powered airgun for use by those 16 years of age or older.

## Section I. SPECIFICATIONS

The Hatsan Hercules Bully PCP rifle has a 17-shot magazine in .177 (4.5mm), 14-shot magazine in .22 (5.5mm), 13-shot magazine in .25 (6.35mm), 10-shot magazine in .30 (7.62mm), 9-shot magazine in .35 (9mm) and 7-shot magazine in .45 (11.43mm) caliber. It is a pre-charged pneumatic, manual-loading, repeating air rifle with a non-removable 500cc volume air reservoir.


Model	Caliber	Max Muzzle Velocity Lead Pellet (*)	Energy (*)		Magazine Capacity	Air Tube Volume	Fill Pressure
			Joules	ft.lbs			
Hercules Bully	4.5mm / .177cal	396m/s (1300fps)	44	32.5	17	500cc	250 BAR
	5.5mm / .22cal	375m/s (1230fps)	67	49	14	500cc	250 BAR
	6.35mm / .25cal	365m/s (1200fps)	87	64	13	500cc	250 BAR
	7.62mm / .30cal	300m/s (990fps)	132	97	10	500cc	250 BAR
	9mm / .35cal	271m/s (890fps)	193	142.5	9	500cc	250 BAR
	11.43mm / .45cal	224m/s (741fps)	396	292	7	500cc	250 BAR

Model	Number of Shots Per Fill	Number of Shots at Optimal Velocity	Stock	Overall Length	Barrel Length	Weight	Fiber Optic Sights Diameters	
							Rear Sight	Front Sight
Hercules Bully	95	45	Advanced polymer, tactical bullpup stock with integrated pistol grip	920mm (36.2")	585mm (23")	4.65kg (10.3lbs)	0.9mm (.035") green	1.5mm (.060") red
	85	40						
	80	36						
	50	15						
	45	13						
	19	8						

\* Velocity results may vary as much as 20% due to pellet weight, pellet shape, temperature, elevation, as well as other factors.

\* The energy restriction of a particular country can be achieved by the reduction in the muzzle velocity. The above maximum velocity figures are obtained when there is no energy restriction on the air rifle and when measured at optimum pressure value in the air tube. As a nature of PCP air rifles the velocity starts low at maximum pressure level in the air tube, then starts to increase and gets to the maximum at optimum pressure value in the air tube; and then it starts to decrease again as the pressure in the air cylinder gets too low.

## Section II. BASIC PARTS OF YOUR GUN

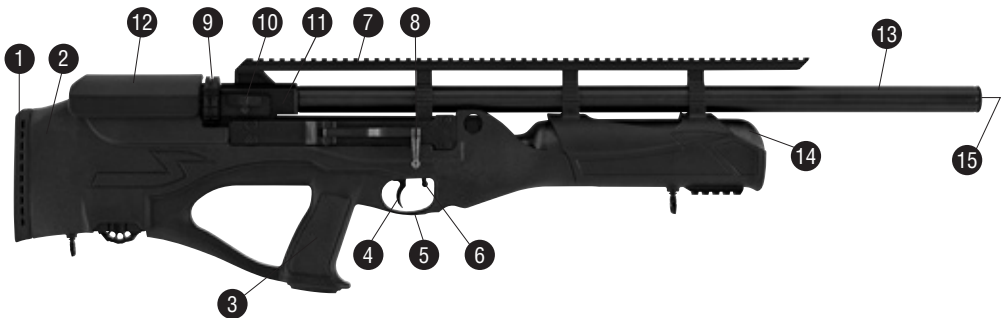

- |                  |                             |                        |
|------------------|-----------------------------|------------------------|
| 1. Butt Pad      | 6. Safety Button            | 11. Receiver           |
| 2. Stock         | 7. Scope Rail               | 12. Cheek Piece        |
| 3. Grip          | 8. Cocking Handle           | 13. Barrel with Shroud |
| 4. Trigger       | 9. Magazine                 | 14. Air Tube           |
| 5. Trigger Guard | 10. Magazine Release Button | 15. Muzzle             |

## Section III. MANUAL SAFETY

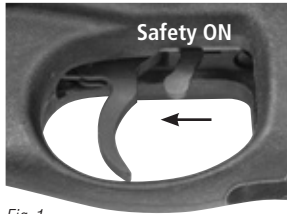


Fig. 1

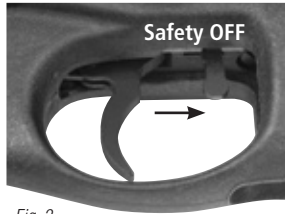


Fig. 2

**CAUTION:** Until you are actually ready to shoot, keep the safety in the “ON” position (Fig. 1).

Safety button can be set to ‘ON’ and ‘OFF’ position manually.

To set the safety to ‘ON’, pull safety lever to the rear. In this position, the trigger cannot be pulled and the gun cannot be fired. (Fig. 1)

To move the safety to ‘OFF’, push safety lever forward. In this position, the gun is ready to shoot. (Fig. 2)

## Section IV. ADJUSTABLE TRIGGER



Fig. 3A

Your air rifle is equipped with a 2-stage adjustable trigger. The stock needs to be removed in order to access trigger adjustment screws. The stock can be disassembled by removing the stock connection screws by using a 5mm hex key tool. (Fig. 3A and Fig. 3B)



Fig. 3B

You can adjust the “trigger travel” & “trigger pull” as seen on Fig. 4

**SCREW#1** is for trigger pull force adjustment. For less trigger pull force prior to discharge, rotate **SCREW#1** clockwise; and vice versa.

**SCREW#2** is for trigger travel adjustment. For less trigger travel prior to discharge, rotate **SCREW#2** clockwise; and vice versa.



Fig. 4

*NOTE: Make only small changes to one adjuster at a time. Over-adjusting can render the trigger inoperable and may create a dangerous situation!*

## Section V. MICRO ADJUSTABLE REAR-SIGHT

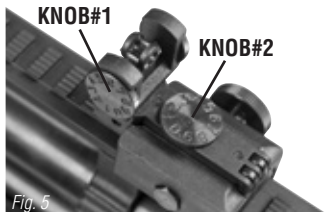


Fig. 5

Hercules Bully comes with fiber optic rear & front sights. The rear-sight can be adjusted both for elevation and windage.

### Windage adjustment

- If the shot is deflected to the left of the target, turn the KNOB1 clockwise. (Fig. 5)
- If the shot is deflected to the right of the target, turn the KNOB1 counter-clockwise. (Fig. 5)

### Elevation adjustment

- If the shot is too high, turn KNOB2 clockwise. (Fig. 5)
- If the shot is too low, turn KNOB2 counter-clockwise. (Fig. 5)

## Section VI. COMFORT ADJUSTMENTS

Comb Adjustment: The comb is adjustable for elevation. Simply press circular button on beneath comb and adjust the comb elevation suitable to your aiming position. (Fig. 6)

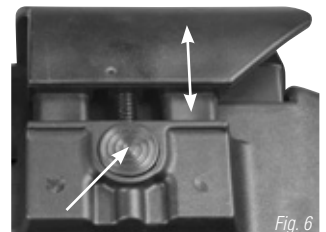


Fig. 6

## Section VII. OPERATING INSTRUCTIONS

### Warning!

Take all safety measures before filling the air cylinder. It is compulsory for the user and bystanders to wear eye & ear protection when filling the air cylinder.

Before filling the air cylinder; make sure the safety is in the ON position, no pellets are loaded in the air rifle and/or barrel and magazine is not mounted in the gun. If the air tube is completely empty; fill air tube after cocking the gun and keeping the cocking handle/bolt open at the rear.

While filling the air cylinder; the pressure in the air cylinder must be monitored from the air gauge of the hand pump or scuba charging kit. Do not look at the air gauge on the air cylinder during filling process. Instead, reference the gauge on your fill device.

### Charging the Rifle:

1. Pull the cocking handle backwards until it stops and locks at the back. Keep the cocking handle open at the rear. **(Fig.7A) THIS OPERATION COCKS THE TRIGGER MECHANISM/HAMMER ASSEMBLY. IF THE SAFETY IS SET TO OFF POSITION AND THE TRIGGER IS PULLED, THE RIFLE WILL DISCHARGE.**
2. Fit the filler nozzle to the air-line of the charging equipment, which must incorporate a pressure gauge. **(Fig.7B)** Ensure both filler nozzle and rifle filler hole are clear from dirt and gently push the nozzle into the filler hole.
3. Fill the rifle to the cylinder pressure quoted previously in this manual. Do not exceed the maximum fill pressure as this will reduce the velocity of the rifle and may damage rifle components and may cause danger to you and others around you. When using diver's bottle, refill the rifle slowly to prevent heat created by the filling process from damaging the rifles components.
4. Undo the bleeder valve on the hose before disconnecting the fill nozzle from the rifle.



Fig. 7A



Fig. 7B

### Loading the rifle & shooting

1. The magazine incorporates a raised boss on its rear face and can only be fitted one way to the rifle. It rotates clockwise when viewed from the rear of the rifle.
2. Load pellets through the rear of the magazine. **(Fig. 8)**. Push the pellet noses through the retaining O-ring until their skirts lie flush or below the bottom of the magazine face.
3. To fit the magazine into the air rifle; pull the cocking handle backwards until it stops. **THIS OPERATION COCKS THE TRIGGER MECHANISM/HAMMER ASSEMBLY. IF THE SAFETY IS SET TO OFF POSITION AND THE TRIGGER IS PULLED, THE RIFLE WILL DISCHARGE.**

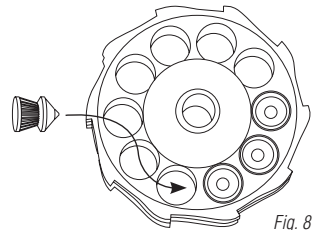


Fig. 8



Fig. 9



Fig. 10

4. Push forward the magazine release bolt and insert the magazine into its slot from the right. (Fig.9) Lock magazine release bolt by sliding it backwards. (Fig. 10). If necessary rotate the magazine counter-clockwise until its movement is arrested by the magazine stop.  
**DO NOT CLOSE THE COCKING HANDLE / MAGAZINE RELEASE BOLT UNTIL YOU ARE READY TO FIRE. ENSURE THE COCKING HANDLE IS FULLY CLOSED BEFORE FIRING THE RIFLE AS ITS PERFORMANCE WILL BE AFFECTED IF NOT FULLY CLOSED.**
5. Close the cocking handle and ensure that it lays flat against the rifle (Fig. 11). Aim at your intended target and disengage the safety and prepare to shoot.
6. Pull the trigger gently and the rifle will fire.
7. To reload rifle, pull the cocking handle to its rear-most position. This will index the magazine and align the next pellet with the barrel. Then, repeat steps 5, 6 and 7.

*Note: You cannot cock the rifle and index the next pellet in the magazine unless you shoot the previous pellet in the barrel. This is because of a feature which prevents more than one pellet being loaded in the barrel – as this may cause damage to the rifle.*



Fig. 11

## Section VIII. MAINTENANCE

### Warning!

**Never attempt to disassemble this rifle when it is charged, except for removal and replacement of the air cylinder. Never fire the rifle when the air cylinder is removed or empty. Failure to obey this instruction could result in damage to your rifle.**

Never lubricate inside the barrel as this will affect the accuracy & grouping of the rifle in negative manner.

- Occasionally apply proper mineral based oils sparingly to the following parts:
- The trigger mechanism
- The pellet probe
- The cocking lever sliding surface
- The stern of the magazine pin and the magazine release
- The magazine axis hole and the outer O-ring

### DO NOT OVER-LUBRICATE THE RIFLE!

- It is recommended to clean the barrel with a cleaning rod every 500-1000 shots. Never lubricate inside the barrel.
- Before you begin oiling or cleaning your air gun, always check to make sure it is unloaded.
- Always be sure your gun barrel is clean and not blocked.
- After cleaning ensure that no cleaning patch or other obstruction remains in the barrel.
- Annually, take your air gun to a gunsmith even if it seems to be working well, since some issues in your gun may not be apparent from external examination.
- Take your air gun to a gunsmith if water, sand, etc. enters the internal mechanism of the air gun, for complete cleaning.
- Dangerous conditions may occur if you do not keep your air gun clean and working properly.

### Quick Fill Nozzle O-Rings Replacement

After a period of time, the O-rings on the fill nozzle will need to be replaced. The need for this will become noticeable if air is heard leaking from the nozzle or the nozzle is ejected from the port while charging the rifle. Always ensure to replace both O-rings.

### Magazine O-rings Replacement

The O-ring which retains the pellets in the magazine will need to be replaced after many hundreds of shots have been fired. Its replacement becomes apparent when the rifle's cocking lever becomes stiff to operate. Repositioning the O-ring in its groove may also overcome the stiffness. Lightly oil the replacement O-ring before fitting.

## Safety Measures & Warnings

- This air gun will fire if cocked, loaded, safety disengaged and trigger pulled.
- Air guns are not toys. Never let young children use an air gun unsupervised. Adult supervision is strictly required during use. Misuse or careless use may cause serious injury or death.
- This is a high-powered airgun for use by those 16 years of age or older.
- Learn how your air gun operates and practice safe gun handling procedures before loading and using it.
- **ALWAYS USE EYE & HEARING PROTECTION AND MAKE BYSTANDERS USE THE SAME.** Failure to do so may result in eye injuries and permanent hearing loss.
- Do not point at anything you do not intend to shoot even though the gun is unloaded. Always keep the gun pointed in a safe direction.
- Never pull a gun toward you by the muzzle.
- Always aim at a safe target, taking care that it does not conceal any other object.
- Before you fire, consider where the pellet will travel should you miss your intended target, thus ensuring no damage or harm could result.
- Be sure of your target before you pull the trigger. Never shoot at sounds.
- When shooting, always have a safe shooting range, that is; have a safe area for shooting, a safe distance between you and the target, and a safe backstop to trap the pellets and hold the target.
- Do not fire at a target, which allows ricochets or deflections. Do not fire into or at water.
- Do not fire at or near power lines or insulators. Be especially careful in wooded areas where power lines may not be as visible.
- Do not load the gun until you are ready to shoot.
- Always keep your fingers away from the trigger & muzzle during cocking and handling.
- Do not walk, run or jump when carrying a loaded or cocked air gun. A loaded or a cocked gun should never be carried inside a vehicle, house, camp or public place. Never climb a tree or fence or jump a ditch with a loaded gun. In such a case, first unload it and hand the gun to a friend or place it on the ground on the other side of the obstacle before crossing yourself.
- When transporting the gun, keep it unloaded and 'on safe'.
- Always keep the gun 'on safe' until you are ready to shoot even if the gun is unloaded.
- Do not put the gun away loaded and unattended.
- Always check to see if the gun is 'on safe' and unloaded when getting it from another person or from storage.
- Always keep the air gun and/or pellets out of the reach of children. Keep the air gun and pellets in separate places, better if under lock and key.
- Do not attempt to disassemble or tamper with your gun. Use a competent gunsmith. Many air guns contain powerful springs or high pressure air cylinders which can cause serious injury if released in an uncontrolled manner.
- Always handle and treat your gun as though it were loaded.
- Improper use or handling of air guns is not the responsibility of the manufacturer or distributor, under any circumstances. The user is responsible for any harm, which may be caused.
- Think first, fire second. Don't rely on any mechanical safety. Half safe is not safe.
- Be safe not sorry. Respect other's property.
- Air guns should never be used under the influences of alcohol or drugs.
- Do not brandish or display this product in public – it could confuse people and may be a crime.
- Do not change the coloration and markings to make it look more like a firearm.



## Hatsan's Hercules Bully Proves Power and Price Aren't Mutual



**Bentonville, AR**— Two years ago, Hatsan released its popular, hard-hitting Hercules PCP airgun. Available in six calibers and able to deliver an unprecedented accurate shot-count, the airgun was testament to Hatsan's innovation.

Listening to its fans and the airgun community, Hatsan revisited the Hercules and is proud to announce the new Hercules Bully.

The most noticeable feature of this new hard-hitting PCP is its synthetic bullpup stock, with "EasyAdjust" cheek comb and elevation adjustment button. The Hercules Bully is also twelve inches shorter than its predecessor and is equipped with a carbon fiber air reservoir to reduce weight by 3 pounds. These components work in collaboration to not only reduce weight, but also provide shooters with a more balanced and comfortable shot.

Additionally, Hatsan has relocated the cocking mechanism to sit just above the trigger - making this bullpup rifle easier to cock, and eliminating the need to remove it from the shooting position when cycling the next round.



Despite these advancements and upgrades, the Hercules Bully will have making it one of the most affordable side-lever action big bore airguns on the market without sacrificing any of the hallmark features found in nearly all of Hatsan's PCP airguns – including a two-stage adjustable trigger and a QuietEnergy fully shrouded and barrel with Integrated Sound Moderator that reduces shot noise by up to 50%.

### **HatsanUSA Hercules Bully**

- Bullpup design, side-lever action, pre-charged pneumatic (PCP) air rifle
- Available in .177, .22, 25, .30, .35, and .45 caliber
- QuietEnergy fully shrouded barrel and Integrated Sound Moderator – Up to 50% Quieter
- Precision rifled and choked barrel for accuracy
- 500cc carbon fiber air bottle mounted in the forearm
- Three detachable, caliber specific, multi-shot magazines
- Quick-fill nozzle
- Synthetic ambidextrous bullpup stock
- “EasyAdjust” Cheek Comb - Stock equipped with integrated elevation adjustment button
- Picatinny rail beneath the forearm
- Checkered grip and forearm for better control and feel
- Built-in pressure gauge to monitor the cylinder pressure
- Long combination optics rail accepts both 11 mm and Picatinny scope mounts
- “Anti-double pellet feed” mechanism prevents more than one pellet loading into barrel
- Detachable folding and adjustable sights with Truglo fiber optics
- Two-stage adjustable trigger for trigger travel and trigger load
- Fitted sling swivels

# HERCULES BULLY

1030fpsPOWER!

FULLY SHROUDED  
BARREL



Available in **45** cal.



## QuietEnergy Barrel Technology

QuietEnergy Sound moderator in muzzle break for reduced down-range noise

- Genuine bullpup design, manual loading, side-lever action, pre-charged pneumatic (PCP) air rifle.
- QuietEnergy fully shrouded barrel and Integrated Sound Moderator - Approximately 50% Quieter.
- Precision rifled choked barrel for accuracy.
- Available in .177 (4.5 mm), .22 (5.5 mm), .25 (6.35 mm), .30 (7.62mm), .35 (9mm) and .45 (11.43mm) caliber.
- Detachable 17-shot magazine in .177 (4.5mm), 14-shot magazine in .22 (5.5mm), 13-shot magazine in .25 (6.35mm), 10-shot magazine in .30 (7.62mm), 9-shot magazine in .35 (9mm) and 7-shot magazine in .45 (11.43mm) caliber.
- 500cc volume air bottle mounted in the forearm.
- 2 spare magazine carrying slots in the stock
- Includes 3 magazines.
- Includes quick-fill nozzle.
- Thumbhole synthetic ambidextrous bullpup stock.
- "EasyAdjust" Cheek Comb - Stock equipped with integrated elevation adjustment button
- Picatinny rail beneath the forearm.
- Checkering on grip and forearm for better control and feel.
- Built-in pressure gauge to monitor the cylinder pressure.
- Long picatinny rail for both 11 mm and 22 mm scope mounts.
- Black anodized aluminum receiver.
- Manual safety.
- "Anti-double pellet feed" mechanism preventing more than one pellet loading into barrel.
- Foldable design adjustable rear sight with Truglo fiber optics. Rear sight can also be detached from the picatinny rail.
- Foldable design front sight with Truglo fiber optics. Front sight can also be detached from the picatinny rail.
- 2-stage adjustable trigger for trigger travel and trigger load.
- Black metal trigger.
- Fitted sling swivels.



Foldable and detachable sights.

## Technical Specs

Model		Hercules Bully					
Caliber		4.5 mm / .177 cal	5.5 mm / .22 cal	6.35 mm / .25 cal	7.62mm / .30cal	9mm / .35cal	11.43mm / .45cal
Max. Muzzle Velocity (*)		396m/s (1300fps)	375m/s (1230fps)	365m/s (1200fps)	300m/s (990fps)	271m/s (890fps)	224m/s (741fps)
Energy (*)	Joules	44	67	87	132	193	396
	ft.lbs	32.5	49	64	97	142.5	292
Magazine Capacity		17	14	13	10	9	7
Air Tube Volume		500cc					
Fill Pressure		250 BAR					
Number of Shots Per Fill		95	85	80	50	45	19
Number of Shots at Optimal Velocity		45	40	36	15	13	8
Stock		Advanced polymer, tactical bullpup stock with integrated pistol grip					
Overall Length		920mm (36.2")					
Barrel Length		585 mm (23")					
Weight		4.65 kg (10.3 lbs)					
Fiber Optic Sights Diameters	Rear Sight	0.9 mm (.035") green					
	Front Sight	1.5 mm (.060") red					

\* Velocity results may vary as much as 20% due to pellet weight, pellet shape, temperature, elevation, as well as other factors.

\*\* Minimum 100 bar pressure necessary for semi auto action.

Learn more about hunting and shooting we have.