Brite Nite™
Pop-Up Lantern™

User's Manual

We are constantly improving our products so specifications are subject to change without notice.

Thank you for purchasing the Brite Nite™ Pop-Up Lantern™ by Wagan Tech®. With normal care and proper treatment, it will provide years of reliable service. Please read all operating instructions carefully before use.

FEATURES

- CREE LED
- 3 light modes: High, Low and SOS
- Dual function flashlight and lantern
- Dual hooks for hands-free lighting
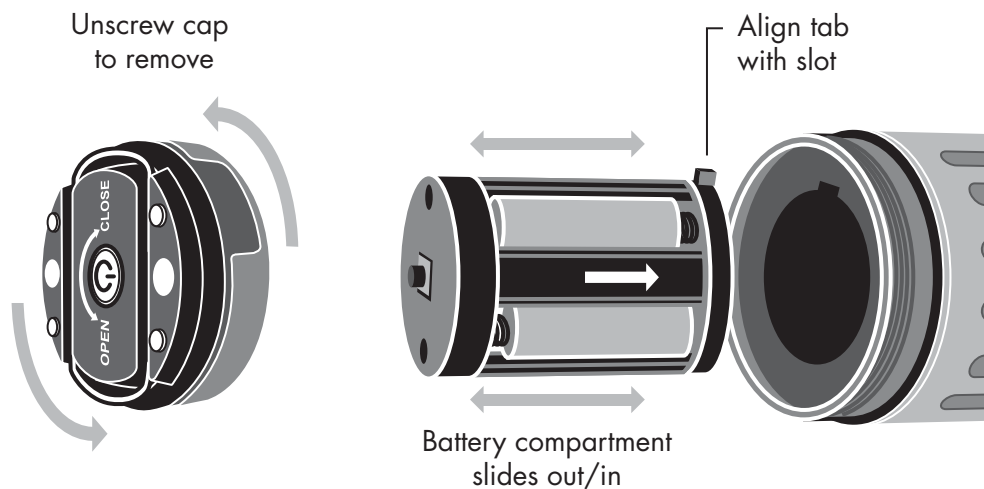- Strong magnetic base
- Compact and lightweight

WAGAN® TECH

SPECIFICATIONS

Lumens	200 (high), 100 (low)
Run Time	6 hours (high), 15 hours (low)
Battery	4 x AA batteries
IP Rating	IPX4—water resistant
Impact Resistance	1 meter
Beam Distance	150 meters

CAUTION

- Never point the light beam directly into the eyes of another person or animal.
- This product is not a toy: Do not allow children to play with or near this item.
- Do not store in direct sunlight or near a heat source.
- Use for intended purposes only.
- Do not submerge in water.
- This product contains strong magnets that may cause interference with pacemakers and other implanted medical devices when placed within a close proximity. Keep this product at least 6 inches from your chest if you have a pacemaker.

INSTALLING THE BATTERIES

1. Unscrew the battery compartment cover
2. Remove the battery cartridge.
3. Install 4 AA batteries.
   - For best performance, replace all batteries at the same time. Do not mix old and new batteries or batteries of different types (alkaline, heavy duty, and rechargeable).
4. Replace cartridge, align tab with slot.
5. Replace the battery compartment cover.

Unscrew cap
to remove

Align tab
with slot

Battery compartment
slides out/in

CARE AND MAINTENANCE

- Periodically wipe the entire lantern with a soft clean cloth.

- To improve the ease of sliding the lantern up and down, add a small amount of silicone lubricant to the lamp sliding surface

- Batteries should be removed from your unit if it will not be used for an extended period of time.

USAGE

The Pop-Up Lantern has 3 light modes.

1. To turn unit on: press the power button

2. To change modes: press the power button to cycle through the modes once for each mode (High > Low > SOS > OFF).

Pull up
to use as
a lantern!

WAGAN®
T E C H

If you're looking for quality camp lighting, visit our website.