

100%

WARRANTY INFO
&
INSTRUCTIONS

THE FORECAST
ADVANCED FILM SYSTEM

Materials:

100% Forecast film system frames are full TPU (Thermoplastic Polyurethane). TPU is flexible and durable, therefore ensuring a comfortable fitting frame that performs in any type of weather conditions.

Forecast Film System Care:

- Clean the lenses with mild ph 5.5 soap and water
- Blot the lens with your goggle bag or a soft cloth to remove excess moisture, or allow to air dry.
- Avoid cleaning or drying the lens with any paper products as it will damage the lens and/or coating.
- If the lens is scratched, please contact your authorized 100% dealer to purchase replacement parts.
- Use only 100% parts and accessories.
- Do not place your Forecast Film System face down.
- Always store your Forecast Film System in the supplied bag after use or during transport.
- Always store your Forecast Film System in a cool dry place away from direct sunlight and/or heat.
- Do not expose your Forecast Film System to extreme heat conditions (100F+, like car dashboards, heater vents or clothes dryers).
- Do not expose your Forecast Film System to strong detergents or harsh chemicals.
- Do not bend your Forecast Film System unnecessarily.
- Inspect your Forecast Film System regularly for damage. If there's damage to the lens and/or frame the system should be replaced.

Questions? Please contact 100% customer service at:

info@ride100percent.com

Limited Warranty:

100% provides a one-year warranty against manufacturing defects from the date of purchase. During the term of this warranty, 100% will replace any current style which is deemed by 100% to possess a manufacturing defect. Scratched Lenses or other wear and tear as a result of normal use are not covered by this warranty.

For warranty or replacement service, please contact us at:


info@ride100percent.com

Intended Use:


This is not a safety goggle. This goggle film system is intended for motorsports use only except official races and competitions. It is for protection from wind, solar radiation, and impacts from water and mud. This system is resistant to scratches in the event of contact with small metallic particles at a rate of 60 m/s.

Forecast Film System Installation and Use:


1. First remove your current Racecraft, Accuri or Strata lens from your goggle.
2. Install the assembled system by inserting the thin outer edges of the black adaptor frame into the lens slot of the goggle. Press firmly around the goggles edges to make sure the flange is seated properly. Be sure that all of the adaptor flange is completely in goggle lens channel.

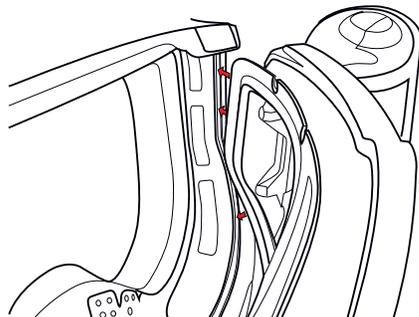


3. Install a new roll of film into the left side canister. Make sure the top of the axle is slot side up.

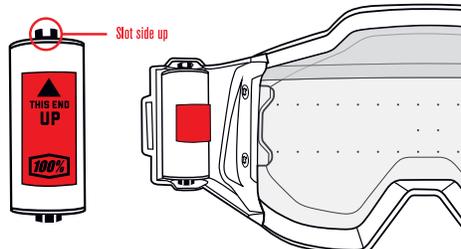


4. Remove one side of the red tape from the film roll such that the film can unwind with the tape still attached. The sticky side of the tape should be facing you.
5. Slide the top edge of the film under the Clear Mud Visor. You may need to lift the end of the Mud Visor to start this process.

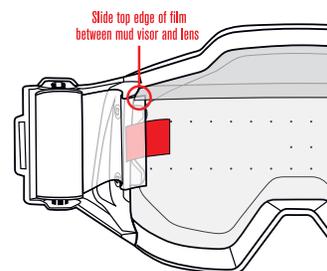


6. Begin pulling the film across the lens, towards the right. Hold the film roll with one hand to keep the roll tight.
7. Slide the bottom edge of the film between the nose bridge and lens. Also, be sure to keep the top edge between the mud visor and lens.
8. Install the empty axle into the right side canister. Make sure the axle is slot side down in this canister.

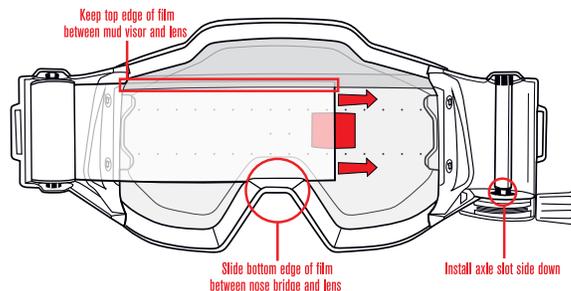


9. Install the left canister cover. Begin by fitting the front points into place first. Then swing the back end of the canister cover down into place and push the lock tab down until you hear a "click". The cover is secure once you've heard the "click".

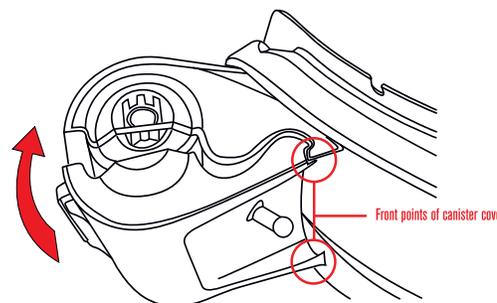

10. Continue pulling the film across to the other side. Be sure the top edge of the film stays between the mud visor and lens. Wrap the tape around the axle in the right side canister using the sticky side.

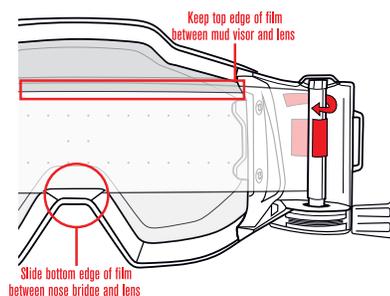

11. Install the right canister cover the same way as the left starting with the front points of the cover. Then swing the cover closed and push the lock tab into place until you hear a "click". Be sure press firmly around the edges to make sure it's completely sealed.
12. For clear vision while riding, pull the pulley tab out and away from the goggle system. Once vision is clear release pulley tab and it will retract automatically. Repeat as necessary. Now GET OUT AND GO RIDE!

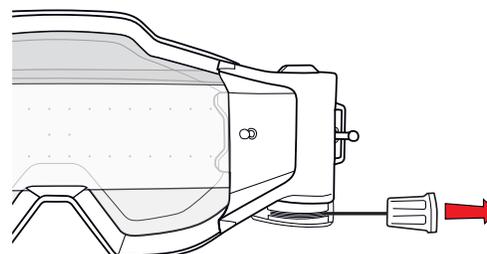

If you're looking for quality bike accessories, visit our website.