

Attach mounting pedestal by turning the C-Clamp knob; adjust the clamp bracket position if necessary. Slide optional rubber clamp boot onto the top of the mount's clamp to prevent scratching clamp surface if desired.

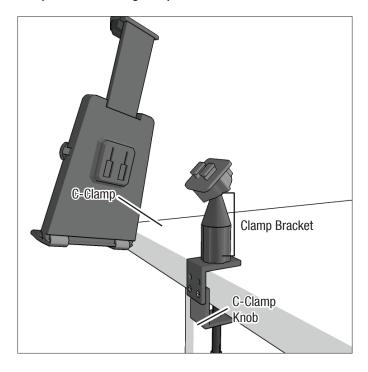


2 Attach tablet holder the the mount

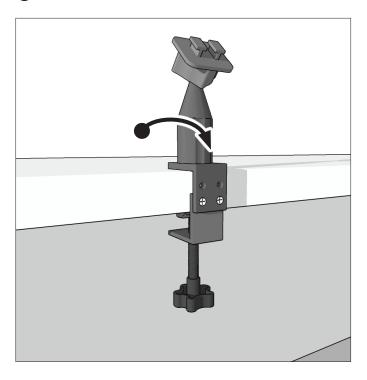



3 Attach the tablet holder and insert tablet; remove tablet by pressing quick release button

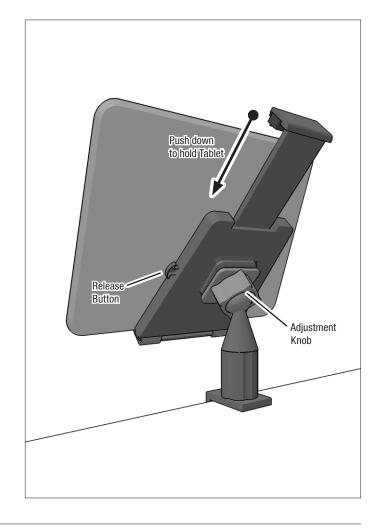





Safety Precautions
Do not install Arkon products over an air bag cover or an air bag deployment zone. Arkon
Resources, Inc. is not responsible and assumes no liability for injury or death as a result of

Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this product.