



KILLZONE®


REPLACEMENT BLADE INSTRUCTIONS

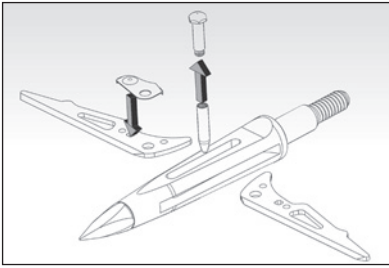


Step 1

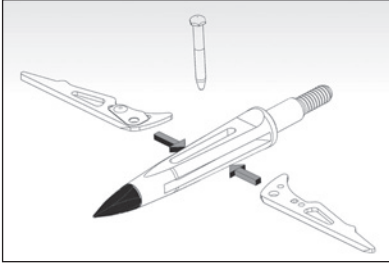


Step 2

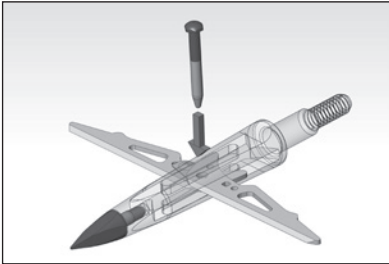


Step 3

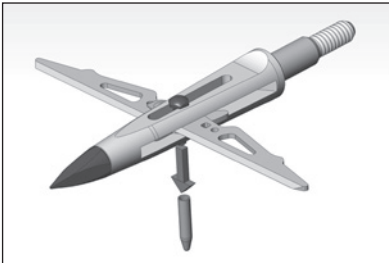


Step 4

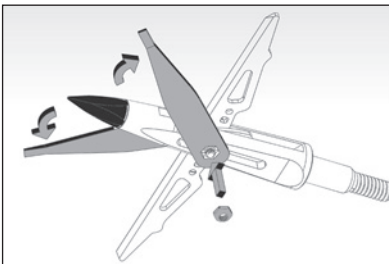

Step 5

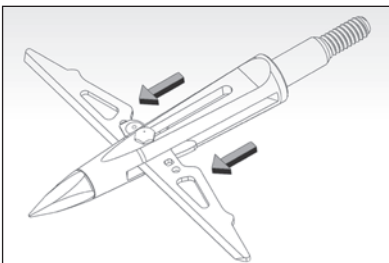

Step 6

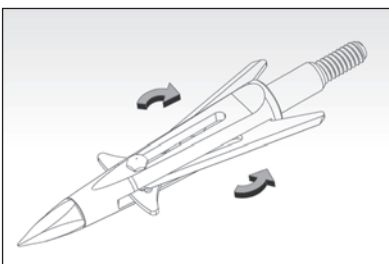

Step 7

Step 1: Place the Spring Clip tabs into the holes on the blade. Thread the brass Guide Pin onto the Pivot Bolt.

Step 2: Insert the Blades into the body. **The blade with the Spring Clip must go on the BOTTOM.** Align the holes.

Step 3: Insert the Pivot Bolt and Guide Pin through the hole in the blades.

Step 4: Remove the Guide Pin from the Pivot Bolt.

Step 5: Thread the Lock Nut onto the Pivot Bolt. **The FLAT SIDE must be against the body of the broadhead.** Tighten until snug with the provided wrenches just until snug. **DO NOT over-tighten.**

Step 6: Push the Blade Assembly all the way towards the point until it stops.

Step 7: Rotate the Blades toward the back. Use your Safety Wrench to push the blades all the way closed.

HANDLE WITH EXTREME CAUTION

This product may be extremely dangerous and will cause injury if handled improperly. To avoid injury use the enclosed safety wrench when attaching and removing broadhead. Store heads in quiver after assembly.