

## Spitfire® Installation Instructions

### For your safety and proper product performance

**MUST BE SHOT ONLY WITH BLADES IN THE CLOSED POSITION.**

**MUST NEVER BE SHOT WITHOUT RETENTION CLIPS PROPERLY INSTALLED.**

**RETENTION CLIPS AND PIVOT SCREWS MUST BE REPLACED AFTER IMPACT HAS OPENED THE BLADES (5) TIMES.**


**MUST NEVER BE SHOT WHEN DAMAGED.**

**MUST BE CHECKED FOR DEBRIS AND DAMAGE AFTER EVERY SHOT.**

**BLADES SHOULD BE REPLACED AFTER EVERY HUNTING SHOT - ETHICAL HUNTERS USE ONLY RAZOR SHARP BLADES.**

**NOTE: BLADES MAY SNAP SHUT AFTER PASSING THROUGH TARGET.**

Fig. 1

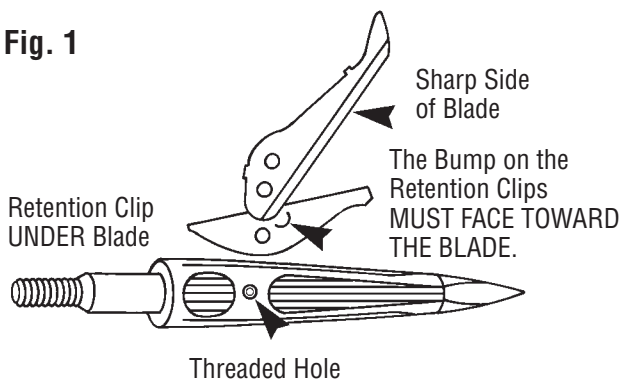

### ASSEMBLY

1. Sandwich blade retention clip and blade together (Fig. 1).
2. Insert into ferrule slot. **NOTE: Sharp edge of blade must face slot in ferrule.**
3. Align holes in ferrule, blade and retention clip.
4. Insert pivot screw in threaded hole and tighten with screwdriver.
5. Repeat above steps for remaining blades.

### DISASSEMBLY

1. With blades closed remove pivot screws with the screwdriver provided.
2. Carefully remove blades and retention clips.

**HANDLE WITH EXTREME CAUTION - This product may be extremely dangerous and will cause injury if handled improperly.  
Store heads in quiver after assembly.**