



Thunderhead® Installation Instructions

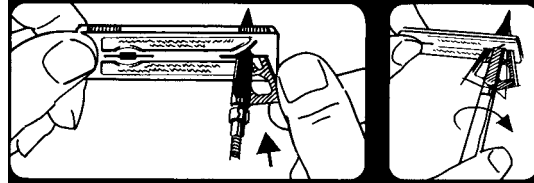

- 1** Slide rings about 1/8" toward the threads. Push ferrule firmly into the safety wrench, ferrule will stay in place by itself. With free hand, place blades into slot, slide forward until blade tip seats under the point.
- 2** Continue to hold head with wrench, screw shaft onto head.
- 3** N.A.P. UBARs (Universal Broadhead Adapter Rings) **MUST** be used when using carbon or small diameter aluminum shafts.

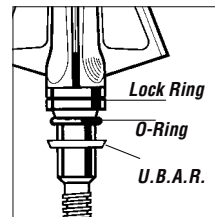

HANDLE WITH EXTREME CAUTION - This product may be extremely dangerous and will cause injury if handled improperly.
To avoid injury use the enclosed safety wrench when attaching and removing broadhead.
Store heads in quiver after assembly.