



THULE[®]
SWEDEN

**Thule Internal Hub
Hitch Adaptor**

Instructions


Thank you for purchasing the Thule Internal Hub Hitch Adaptor Kit. For those who like to ride bicycles with internal gear hubs, this Adaptor Kit will allow you to continue to use your child carrier.

Initial Assembly time: About 5 -10 minutes. Tools Required: A torque wrench (0 to 50 Nm) with 13 mm and 19 mm adaptors.

INSTALLING THE HITCH ADAPTOR

Refer to the diagram below for correct Internal Hub Hitch Adaptor Installation. Steps:

1. Remove current nut from rear (left - non-chain side) axle.
2. Install and tighten Hitch Nut (1) to 40 N-m (30 ft-lb).
3. Install Security Washer (2) over end of Hitch Nut, and then add ezHitch (4).
4. Adjust ezHitch angle and secure with Security Screw (3) by tightening to 20 N-m (15 ft-lb).

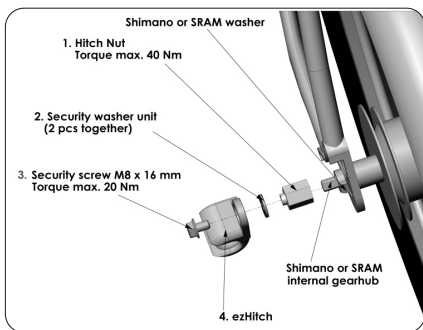

WARNING

Proper installation to specified torque values is important to ensure safe use of this adaptor. If you do not have access to a properly calibrated torque wrench, please see your dealer for proper installation of this accessory.



WARNING

The Hitch Adaptor is compatible with Shimano Inter-7, Inter-8 and Alfine gear hubs or with SRAM i-Motion gear hubs depending on model (see etching on side of hitch nut). Do not attempt to use this adaptor with other internal gear hubs.



WARNING

Use of this Hitch Adaptor requires use of the hitch backup safety strap on the hitch arm. Failure to do so could cause the carrier to become separated from the bicycle resulting in an accident in which your passenger(s) could suffer serious injury or death.